C417

13A409

E10
Lamp assembly,
right rear (13404)

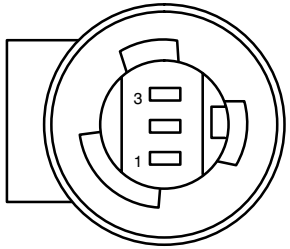

F03113

Pin	Circuit	Circuit function
1	29S-LF23 (OG)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11A (BK/WH)	Ground, Switched
3	31S-LG14 (BK/OG)	Ground, Switched

C418

14A005

E207
Tail lamp, right

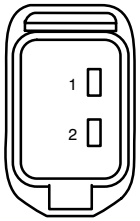

F02095

Pin	Circuit	Circuit function
1	29S-LF20 (OG)	Voltage supplied at all times (overload protected), Switched
2	31S-LF20 (BK/OG)	Ground, Switched

C419

14A005

E206
Tail lamp, left

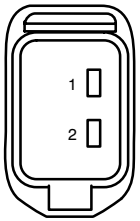

F02095

Pin	Circuit	Circuit function
1	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31S-LF11 (BK/WH)	Ground, Switched

C420a

14A005

A212
Rear Electronic
Module (REM)

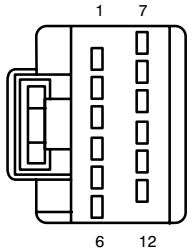

F12077

Pin	Circuit	Circuit function
1	75-GL58 (YE/GN)	Voltage: Ignition switch in Accessory or Run
2	–	not used
3	–	not used
4	–	not used
5	31S-LF12 (BK/GN)	Ground, Switched
6	–	not used
7	–	not used
8	15-RP12B (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
9	8-AA30 (WH)	Sensor signal
10	–	not used
11	31S-LB25 (BK/BU)	Ground, Switched
12	–	not used