-37

F23007

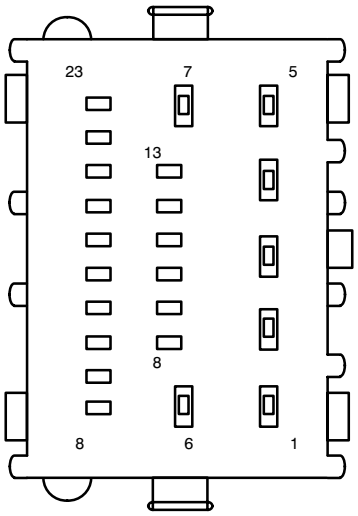

C105

14401

A112
Generic Electronic
Module (GEM)

Pin	Circuit	Circuit Function
1	32-AA59B (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-AA59A (WH/BK)	Switched between: Battery voltage, Ground or Open
2	33-KA6 (YE/BK)	Switched between: Battery voltage, Ground or Open
3	32-KA35 (WH/RD)	Switched between: Battery voltage, Ground or Open
4	8-KA18 (WH)	Sensor signal
5	32-AA59A (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-AA59B (WH/BK)	Switched between: Battery voltage, Ground or Open
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	31S-HB20 (BK/GN)	Ground, switched
16	31S-AA30 (BK/YE)	Ground, switched
17	91S-KA29 (BK/YE)	Ground, switched
18	31S-GE49 (BK/BU)	Ground, switched
19	31S-AA7 (BK/BU)	Ground, switched
20	31S-LC22 (BK/OG)	Ground, switched
21	91S-KA12 (BK/WH)	Ground, switched
	91S-KA12 (BK/WH)	Ground, switched
22	29S-LG43 (OG/WH)	Battery voltage, hot at all times (not fused and primary fused), switched
23	91-AA17 (BK/WH)	Ground