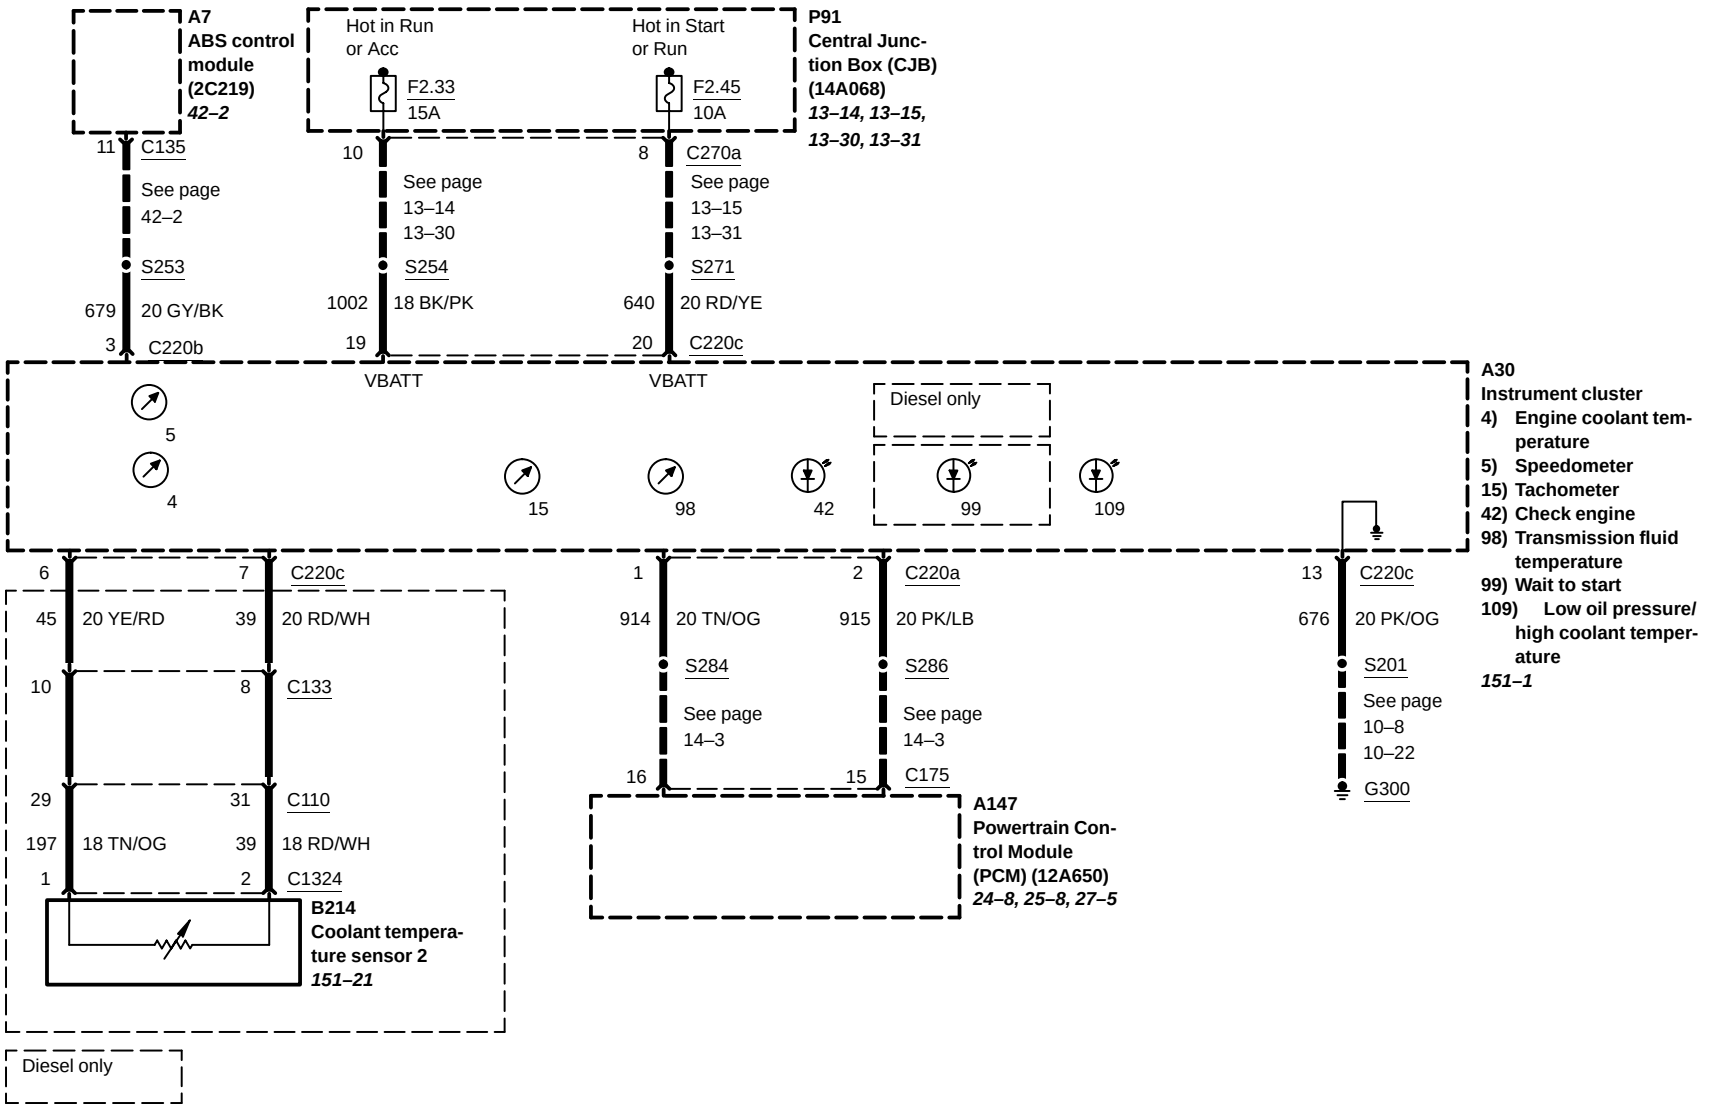
A7
ABS control module (2C219)
42–2
Hot in Run or Acc
Hot in Start or Run
F2.33
15A
F2.45
10A
P91
Central Junction Box (CJB) (14A068)
13–14, 13–15, 13–30, 13–31
11
C135
See page 42–2
S253
679
20 GY/BK
3
C220b
10
See page 13–14 13–30
S254
1002
18 BK/PK
19
VBATT
8
C270a
See page 13–15 13–31
S271
640
20 RD/YE
20
C220c
VBATT
A30
Instrument cluster
4) Engine coolant temperature
5) Speedometer
15) Tachometer
42) Check engine
98) Transmission fluid temperature
99) Wait to start
109) Low oil pressure/ high coolant temperature
151–1
Diesel only
5
4
15
98
42
99
109
6
7
C220c
45
20 YE/RD
39
20 RD/WH
10
8
C133
29
31
C110
197
18 TN/OG
39
18 RD/WH
1
2
C1324
B214
Coolant temperature sensor 2
151–21
Diesel only
1
2
C220a
914
20 TN/OG
915
20 PK/LB
S284
See page 14–3
S286
See page 14–3
16
15
C175
A147
Powertrain Control Module (PCM) (12A650)
24–8, 25–8, 27–5
13
C220c
676
20 PK/OG
S201
See page 10–8 10–22
G300