C1006

14290
14398

K33
Horn relay

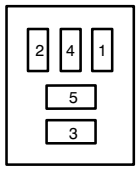

F05064

Pin	Circuit	Circuit function
1	460 (YE/LB)	Horn relay, switched power, output
2	6 (YE/LG)	Voltage supplied at all times (overload protected)
3	460 (YE/LB)	Voltage supplied at all times (overload protected)
4	–	not used
5	1 (DB)	Horn relay, control

C1007

14398

K26
Fog lamp relay

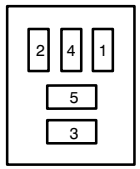

F05064

Pin	Circuit	Circuit function
1	477 (LB/BK)	Fog lamp switch, to front fog lamp, Relay
	474 (OG/LG)	Fog lamp relay, control
2	474 (OG/LG)	Fog lamp relay, control
	477 (LB/BK)	Fog lamp switch, to front fog lamp, Relay
3	1347 (DB/WH)	Voltage supplied at all times (overload protected)
4	–	not used
5	478 (TN/OG)	Fog lamp switch, to front fog lamp