* Early production

## C175b (BK)

### 12A581

Powertrain Control Module
(PCM) (12A650)

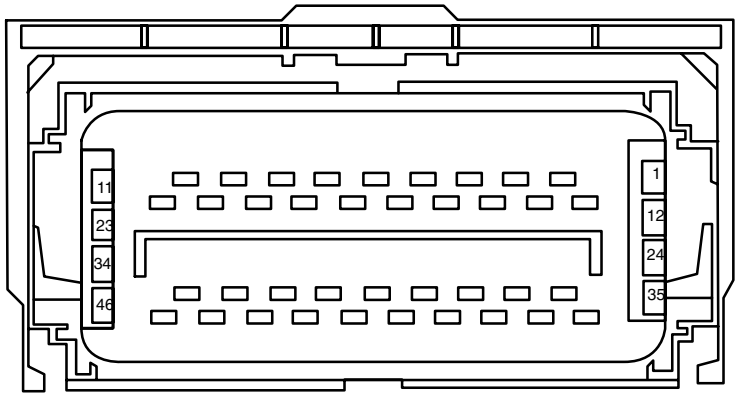


F46001

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 570 (BK/WH) | Ground |
| 2 | 331 (PK/YE) | A/C clutch relay, control |
| 3 | 1498 (PK/OG) | throttle position signal |
| 4 | 325 (DB/OG) | Starter relay (11450), control |
| 5 | – | not used |
| 6 | *638 (OG/LB) | cooling fan speed signal |
| 7 | 1930 (TN/LG) | generator communicator (command) circuit |
| 8 | 791 (RD/PK) | Fuel tank pressure transducer sensor (9C968) |
| 9 | 1269 (OG/RD) | Anti–theft, indicator, control |
| 10 | 567 (LB/YE) | Ground |
| 11 | 570 (BK/WH) | Ground |
| 12 | 1926 (VT/YE) | Speed control servo (9C735), signal C |
| 13 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 14 | 1931 (BN/PK) | generator monitor circuit |
| 15 | 307 (BK/YE) | Brake pressure switch (2B264), output |
| 16 | – | not used |
| 17 | 848 (DG/OG) | Steering wheel control, Ground |
| 18 | *328 (YE/LG) | Power steering pressure switch, signal |
| 19 | 743 (GY) | Intake Air Temperature (IAT) sensor (12A697), input |
| 20 | 238 (DG/YE) | Fuel pump relay, switched power, output |
| 21 | – | not used |
| 22 | 224 (TN/WH) | PCM, to transmission overdrive cancel switch |
| 23 | 570 (BK/WH) | Ground |
| 24 | 1925 (PK/BK) | Speed control servo (9C735), signal, B |
| 25 | *639 (LG/VT) | cooling fan control signal |
| 26 | 1927 (TN) | Speed control servo (9C735), common |
| 27 | 926 (LB/OG) | Fuel pump relay, control |
| 28 | – | not used |
| 29 | – | not used |
| 30 | 968 (TN/LB) | Mass Air Flow (MAF) sensor (12B579), signal, return |
| 31 | 967 (LB/RD) | Mass Air Flow (MAF) sensor (12B579), output |
| 32 | 914 (TN/OG) | SCP Bus + |
| 33 | 359 (GY/RD) | signal, return |
| 34 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 35 | 1924 (DG/WH) | Speed control servo (9C735), signal, A |
| 36 | 91 (VT/WH) | Canister vent |
| 37 | 151 (LB/BK) | Speed control switch, input |
| 38 | 191 (LG/BK) | Powertrain Control Module (PCM) (12A650), EVAP canister purge valve |
| 39 | 107 (VT) | Module programming signal |
| 40 | 729 (RD/WH) | Voltage supplied at all times (overload protected) |
| 41 | 1932 (OG/LB) | A/C compressor thermistor, signal |
| 42 | 1216 (GY/OG) | RX, signal |
| 43 | 1215 (WH/LG) | TX, signal |
| 44 | 915 (PK/LB) | SCP Bus – |
| 45 | 351 (BN/WH) | Reference, voltage |
| 46 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |