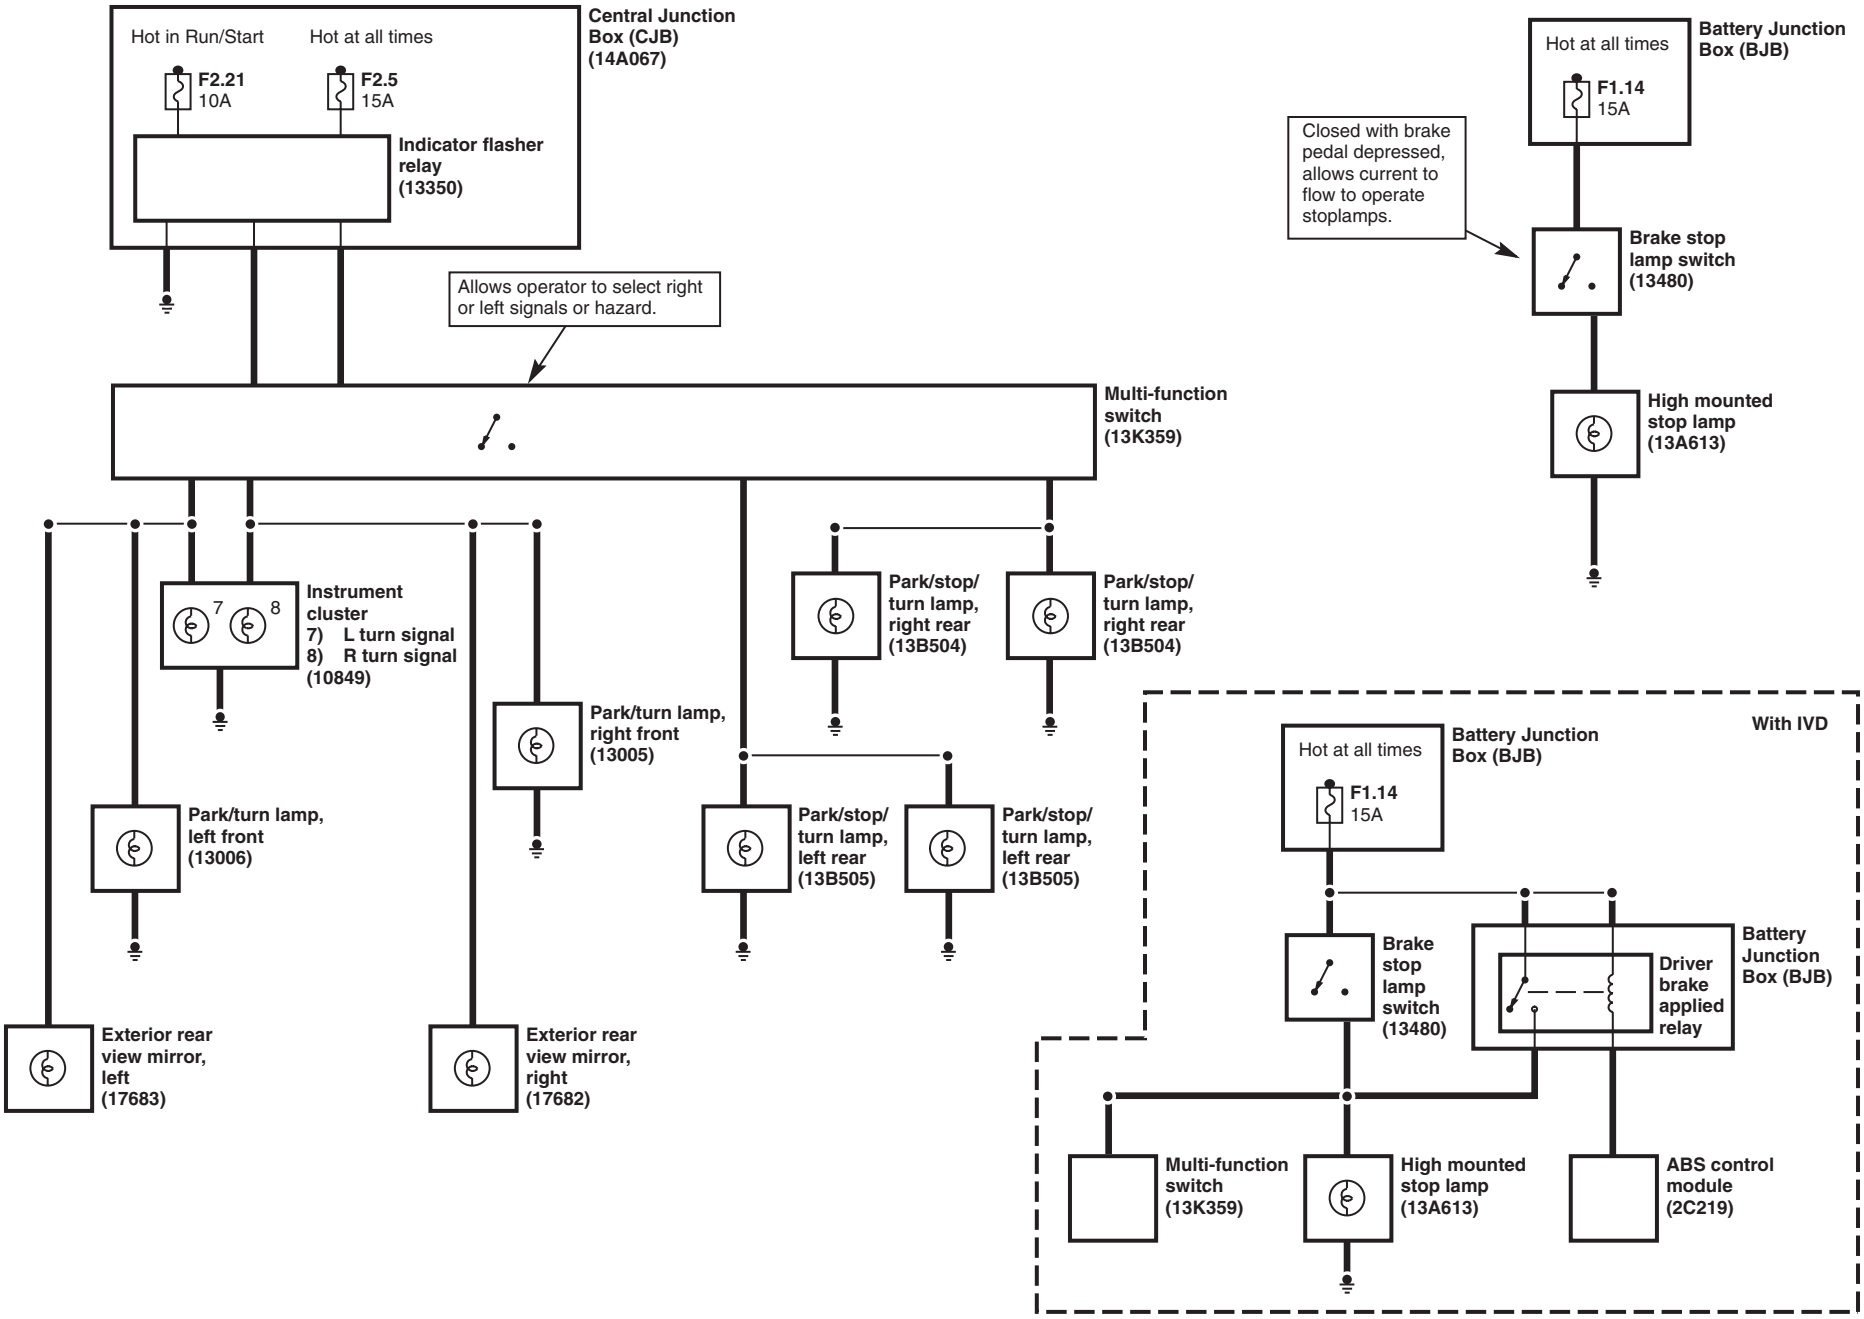
Hot in Run/Start
Hot at all times
F2.21
10A
F2.5
15A
Indicator flasher relay
(13350)
Central Junction Box (CJB)
(14A067)
Allows operator to select right or left signals or hazard.
Multi-function switch
(13K359)
Instrument cluster
7) L turn signal
8) R turn signal
(10849)
Park/turn lamp, left front
(13006)
Park/turn lamp, right front
(13005)
Park/stop/ turn lamp, right rear
(13B504)
Park/stop/ turn lamp, right rear
(13B504)
Park/stop/ turn lamp, left rear
(13B505)
Park/stop/ turn lamp, left rear
(13B505)
Exterior rear view mirror, left
(17683)
Exterior rear view mirror, right
(17682)
Hot at all times
F1.14
15A
Battery Junction Box (BJB)
Closed with brake pedal depressed, allows current to flow to operate stoplamps.
Brake stop lamp switch
(13480)
High mounted stop lamp
(13A613)
With IVD
Hot at all times
F1.14
15A
Battery Junction Box (BJB)
Brake stop lamp switch
(13480)
Driver brake applied relay
Battery Junction Box (BJB)
Multi-function switch
(13K359)
High mounted stop lamp
(13A613)
ABS control module
(2C219)