* Stripped chassis

C220a (WH)

14401

Instrument cluster

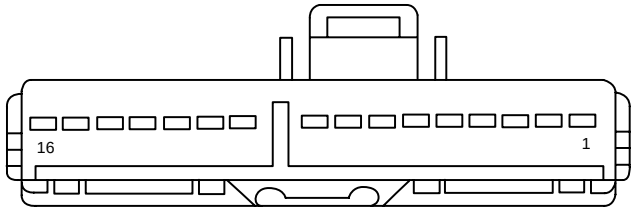

F16135

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	19 (LB/RD)	Instrument illumination, feed
3	729 (RD/WH)	Voltage supplied at all times (overload protected)
4	–	not used
5	570 (BK/WH)	Ground
	*57 (BK)	Ground
6	31 (WH/RD)	Engine oil pressure indicator, control
7	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
8	–	not used
9	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
10	29 (YE/WH)	Fuel pump/fuel gauge sender
11	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
12	–	not used
13	–	not used
14	2 (WH/LB)	Turn lamps, feed, right front
15	–	not used
16	3 (LG/WH)	Turn lamps, feed, left front

C220b (BK)

14401

Instrument cluster

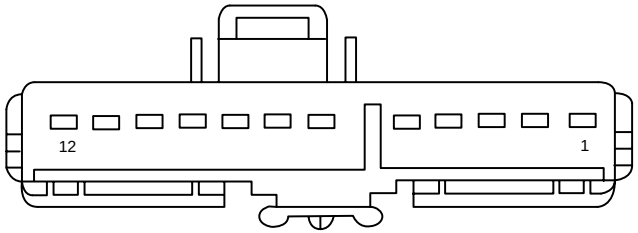

F12158

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
6	–	not used
7	450 (DG/LG)	Safety belt indicator, feed
8	603 (DG)	Anti–lock brake indicator, control
9	12 (LG/BK)	Power, Hot with High Beams on
10	–	not used
11	464 (BK/PK)	Wait to start indicator, control
12	643 (RD)	indicator, Water–in–fuel sensor