## C933 (BK)

### PIA

Roof opening panel position switch




F03213

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | Z1 (BK) | Ground |
| 2 | Q46 (OG/WH) | Roof opening panel position switch, signal |
| 3 | – | not used |

## C1007

### 14290

Fog lamp relay

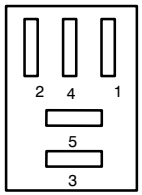


F05110

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 1347 (DB/WH) | Fog lamp switch, output |
| 3 | 54 (LG/YE) | Voltage supplied at all times (overload protected) |
| 4 | – | not used |
| 5 | 478 (TN/OG) | Fog lamp relay, to front fog lamp |

## C1008

### 14290

A/C clutch relay

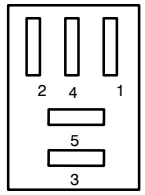


F05110

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 296 (WH/VT) | Voltage supplied in Start and Run (overload protected) |
| 2 | 331 (PK/YE) | A/C clutch relay, control |
| 3 | 883 (PK/LB) | Voltage supplied at all times (overload protected) |
| 4 | – | not used |
| 5 | 321 (GY/WH) | A/C clutch relay, switched output |
| | 321 (GY/WH) | A/C clutch relay, switched output |