# Ignition switch (11572)

## Schematic

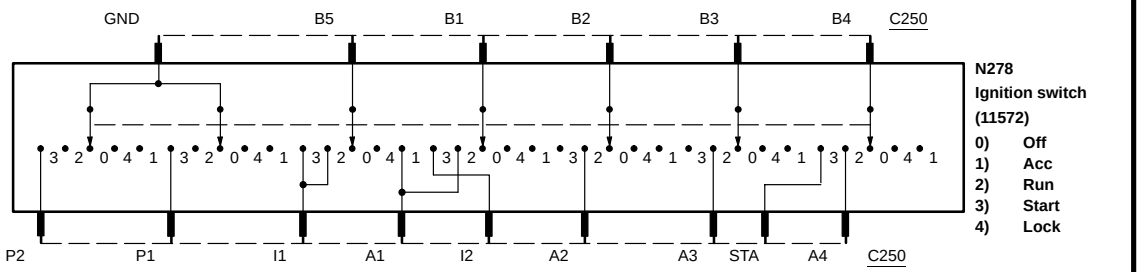


## Terminals

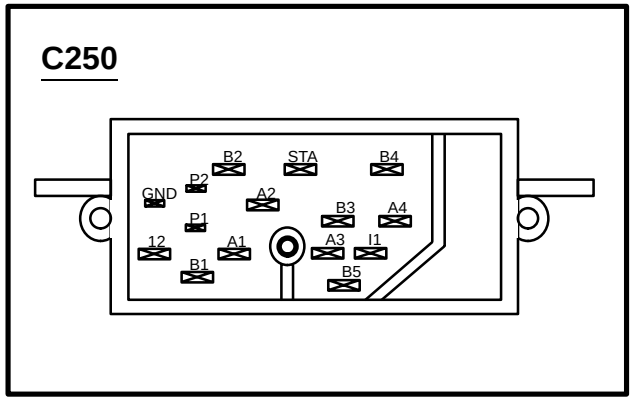


## Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | Move key to these positions | A good switch will indicate |
|---|---|---|---|
| **Run power circuit** | B2 and A2<br>B3 and A3<br>B4 and A4 | Off/Lock | Open circuit |
| | | Accessory | Open circuit |
| | | Run | Closed circuit |
| | | Start | Open circuit |
| **Run/Start power circuit** | B5 and I1 | Off/Lock | Open circuit |
| | | Accessory | Open circuit |
| | | Run | Closed circuit |
| | | Start | Closed circuit |
| **Run/Acc power circuit** | B1 and A1 | Off/Lock | Open circuit |
| | | Accessory | Closed circuit |
| | | Run | Closed circuit |
| | | Start | Open circuit |
| **Start power circuit** | GND and P2<br>GND and P1<br>B1 and I2<br>B4 and STA | Off/Lock | Open circuit |
| | | Accessory | Open circuit |
| | | Run | Open circuit |
| | | Start | Closed circuit |