C466

19B113

A14
Subwoofer amplifier



F10009

Pin	Circuit	Circuit Function
1	7-MD19 (YE/RD)	Voltage D.C. supplied at all times (sensor)
2	31-MD19 (BK)	Ground
3	–	not used
4	–	not used
5	30-MD19A (RD)	Voltage supplied at all times (not overload protected)
6	–	not used
7	1-MD19 (WH/RD)	Audio signal positive
8	2-MD19 (GY/RD)	Audio signal negative
9	–	not used
10	–	not used

C501a

14A005

A215
Driver Door Module
(DDM)

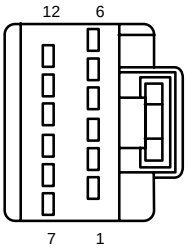

F12077

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	4-EG13 (GY/OG)	Data link, bus positive
4	5-EG13 (BU/BK)	Data link, bus negative
5	–	not used
6	31S-AA64 (BK/GN)	Ground, Switched
7	91-AJ80 (BN/BU)	Ground
8	31-AJ80B (BK/OG)	Ground
9	–	not used
10	31S-AA63 (BK/OG)	Ground, Switched
11	29-AJ80 (OG)	Voltage supplied at all times (overload protected)
12	29S-AJ86 (OG/BU)	Voltage supplied at all times (overload protected), Switched