C1078 (GY)

14398

N126
A/C high pressure switch (19D594)

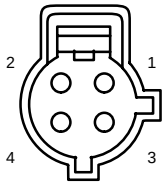

F04195

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	–	not used
3	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
4	–	not used

C1085

14398

V19
A/C Indicator diode



F02009

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	321 (GY/WH)	A/C clutch relay, switched output

C1100a

14A280

O1
Battery (10655)


F01059

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +
	2037 (RD)	Battery cable +

C1100b

14A280

O1
Battery (10655)


F01059

Pin	Circuit	Circuit function
1	2057 (BK)	Battery cable –
	2057 (BK)	Battery cable –

C1101

14398

H7
Horn, left

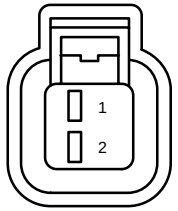

F02069

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1 (DB)	Horn relay, control

C1102

14398

H8
Horn, right

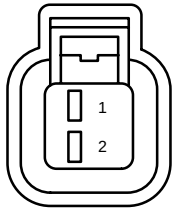

F02069

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	1 (DB)	Horn relay, control