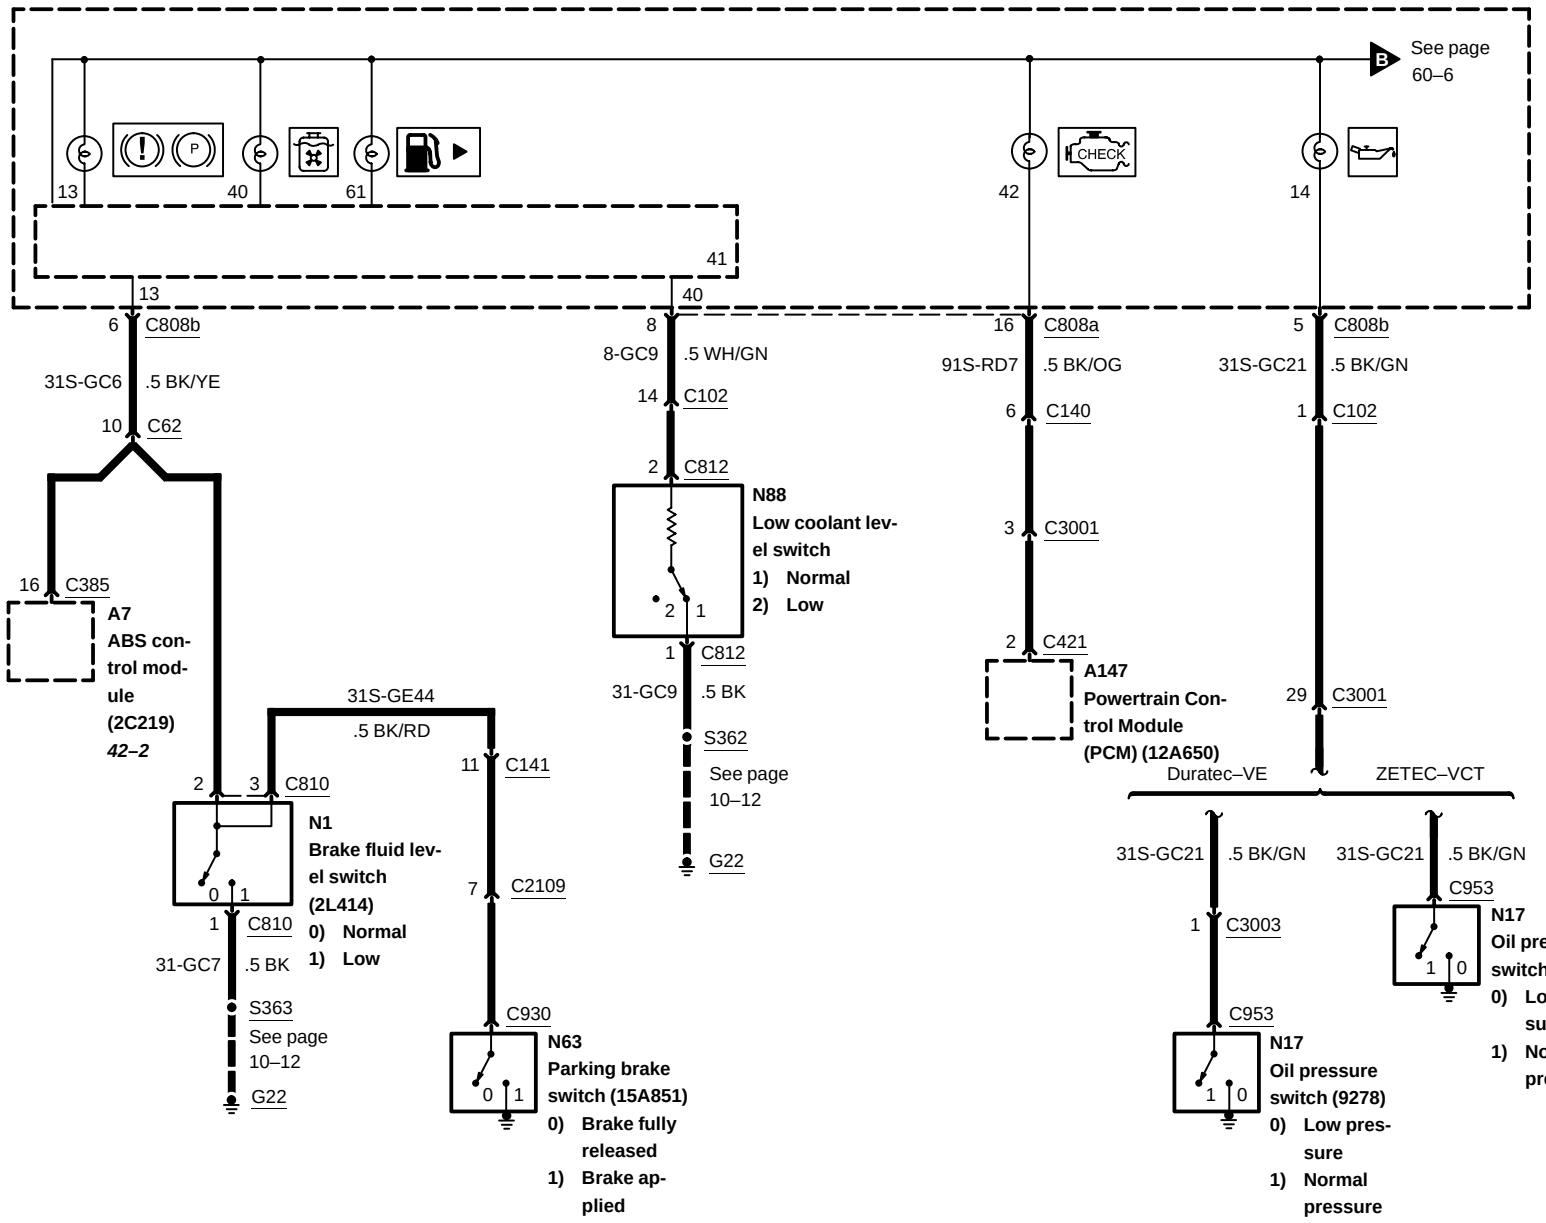
See page 60–6
A30
Instrument cluster
13) Low brake fluid level/ park brake
14) Low oil pressure
40) Low coolant level
41) Microprocessor
42) Check engine
61) Low fuel indicator
13
40
61
42
14
41
CHECK
6 C808b
31S-GC6 .5 BK/YE
10 C62
16 C385
A7
ABS control module (2C219)
42–2
2 3 C810
31S-GE44 .5 BK/RD
11 C141
N1
Brake fluid level switch (2L414)
0) Normal
1) Low
1 C810
31-GC7 .5 BK
S363
See page 10–12
G22
7 C2109
C930
N63
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
8 C808a
8-GC9 .5 WH/GN
14 C102
2 C812
N88
Low coolant level switch
1) Normal
2) Low
1 C812
31-GC9 .5 BK
S362
See page 10–12
G22
16 C808a
91S-RD7 .5 BK/OG
6 C140
3 C3001
2 C421
A147
Powertrain Control Module (PCM) (12A650)
5 C808b
31S-GC21 .5 BK/GN
1 C102
29 C3001
Duratec–VE
ZETEC–VCT
31S-GC21 .5 BK/GN
1 C3003
C953
N17
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
31S-GC21 .5 BK/GN
C953
N17
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure