C146

Dash Harness

Hydromax flow switch

3574228C1

Pin	Circuit	Circuit Function
A	799 (OG/BK)	GEM to hydromax flow switch
B	57 (BK)	Ground circuit

C148

Dash Harness

Dual brake warning switch

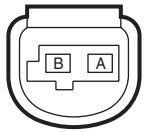

3574229C1

Pin	Circuit	Circuit Function
A	—	Not used
B	512 (TN/LG)	Brake fluid reservoir switch to module

C159A

Dash Harness

WIF warning relay

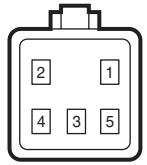

3512331C91

Pin	Circuit	Circuit Function
1	643 (RD)	Diesel water in fuel sender to warning lamp
2	57 (BK)	Ground circuit
3	—	Not used
4	57 (BK)	Ground circuit
5	643 (RD)	Diesel water in fuel relay to module

C159B

Dash Harness

LCT enable exhaust (relay) (CAT)

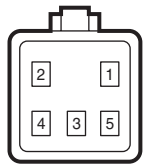

3512331C91

Pin	Circuit	Circuit Function
1	480 (VT/YE)	Module, powertrain control to exhaust brake relay
2	417 (VT/OG)	Power feed to exhaust brake relay
3	—	Not used
4	480 (VT/YE)	Exhaust brake relay to brake relay
5	1286 (RD/OG)	PCM - exhaust brake enable relay