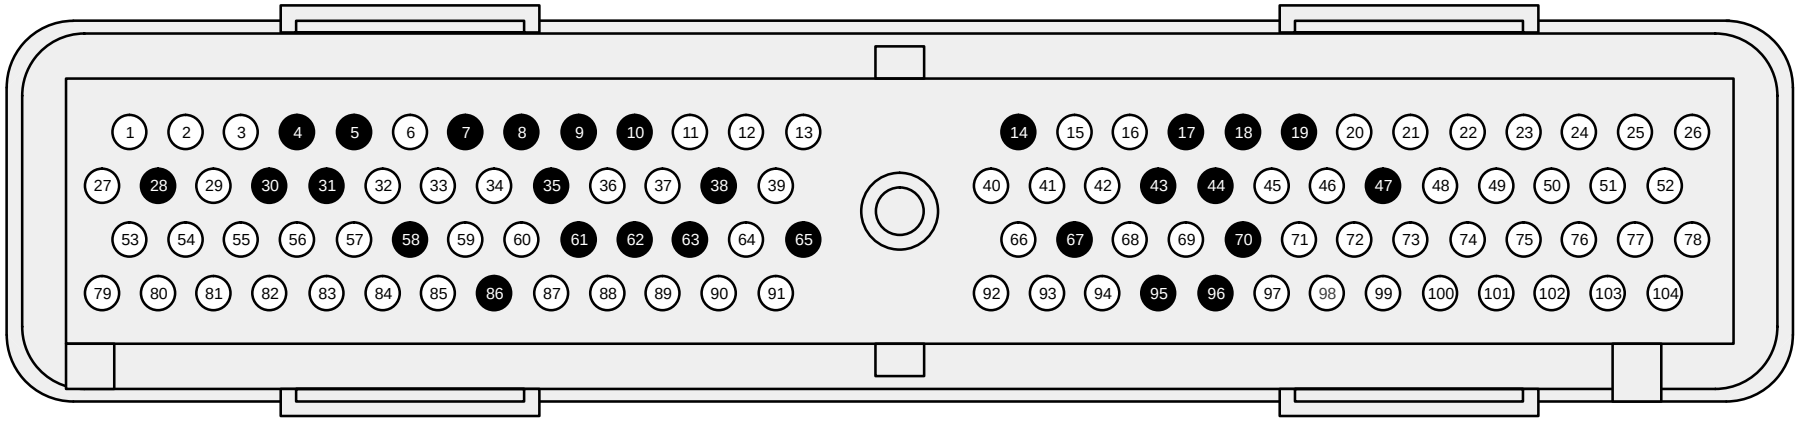

C215

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug #6	17	–	NOT USED
2	658 (PK/LG)	MIL Lamp Control	18	–	NOT USED
3	570 (BK/WH)	Ground	19	–	NOT USED
4	–	NOT USED	20	924 (BN/OG)	Coast Clutch Solenoid
5	–	NOT USED	21	349 (DB)	Crankshaft Position Sensor (+)
6	237 (OG/YE)	Shift Solenoid A	22	350 (GY)	Crankshaft Position Sensor (–)
7	–	NOT USED	23	570 (BK/WH)	Ground
8	–	NOT USED	24	570 (BK/WH)	Ground
9	–	NOT USED	25	567 (LB/YE)	Speedometer/Odometer Diagnostic Ground
10	–	NOT USED			
11	315 (VT/OG)	Shift Solenoid B	26	1024 (LG/WH)	Coil On Plug #1
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	27	1021 (LG/YE)	Coil On Plug #10
			28	–	NOT USED
13	107 (VT)	Generic Scan Tool Input	29	224 (TN/WH)	Transmission Control Switch
14	–	NOT USED	30	–	NOT USED
15	915 (PK/LB)	SCP Data Bus –	31	–	NOT USED
16	914 (TN/OG)	SCP Data Bus +	32	311 (DG/VT)	Knock Sensor

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
33	1203 (BK/LB)	Electronic Module Logic Ground	69	331 (PK/YE)	A/C Clutch Relay
34	1144 (YE/BK)	Digital Transmission Range Sensor (TR1)	70	–	NOT USED
35	–	NOT USED	71	361 (RD)	Power Input
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return	72	561 (TN/RD)	Fuel Injector #7
37	923 (OG/BK)	Transmission Fluid Temperature Sensor	73	559 (TN/BK)	Fuel Injector #5
38	–	NOT USED	74	557 (BN/YE)	Fuel Injector #3
39	743 (GY)	Intake Air Temperature Input	75	555 (TN)	Fuel Injector #1
40	238 (DG/YE)	Fuel Pump Monitor	76	570 (BK/WH)	Ground
41	439 (TN/LG)	A/C Head Pressure Switch	77	570 (BK/WH)	Ground
42	1101 (GY/RD)	Fuel Injector #10	78	1027 (PK/LB)	Coil On Plug #2
43	–	NOT USED	79	1029 (WH/RD)	Coil On Plug #8
44	–	NOT USED	80	926 (LB/OG)	Fuel Pump Relay Control
45	39 (RD/WH)	Temperature Gauge to Temperature Sending Unit	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
46	679 (GY/BK)	Vehicle Speed Sensor (VSS)	82	1142 (WH/RD)	Coil On Plug #9
47	–	NOT USED	83	264 (WH/LB)	Idle Air Control (IAC) Valve
48	648 (WH/PK)	Tachometer to RPM Sensor Output	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	85	795 (DG)	Camshaft Position Sensor Signal
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor (TR4)	86	–	NOT USED
51	570 (BK/WH)	Ground	87	94 (RD/BK)	HEGO #21
52	1028 (WH/PK)	Coil On Plug #5	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
53	1030 (DG/VT)	Coil On Plug #7	89	355 (GY/WH)	Throttle Position Sensor (TPS)
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	90	351 (BN/WH)	Reference Output Voltage
55	785 (BK/LG)	Power (Hot at All Times)	91	359 (GY/RD)	Sensor Signal Return
56	191 (LG/BK)	EVAP Canister Purge Valve	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch Input
57	310 (YE/RD)	Knock Sensor (KS)	93	387 (RD/WH)	HEGO Sensor Heater #11 Voltage Monitor
58	–	NOT USED	94	388 (YE/LB)	HEGO Sensor Heater #21 Voltage Monitor
59	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor	95	–	NOT USED
60	74 (GY/LB)	HEGO #11	96	–	NOT USED
61	–	NOT USED	97	361 (RD)	Power Input
62	–	NOT USED	98	562 (LB)	Fuel Injector #8
63	–	NOT USED	99	560 (LG/OG)	Fuel Injector #6
64	199 (LB/YE)	Digital Transmission Range Sensor (TR3A)	100	558 (BN/LB)	Fuel Injector #4
65	–	NOT USED	101	556 (WH)	Fuel Injector #2
66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor	102	1141 (YE/BK)	Coil On Plug #4
67	–	NOT USED	103	570 (BK/WH)	Ground
68	1100 (GY/BK)	Fuel Injector #9	104	1026 (PK/WH)	Coil On Plug #3