C220a

14401

A30
Instrument cluster

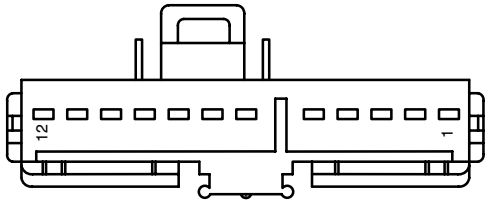

F12020

Pin	Circuit	Circuit function
1	–	not used
2	464 (BK/PK)	Headlamp relay, output
3	–	not used
4	–	not used
5	450 (DG/LG)	Safety belt indicator, feed
6	115 (LG/BK)	”Do not shift” indicator
7	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
8	–	not used
9	–	not used
10	12 (LG/BK)	Power, Hot with High Beams on
11	603 (DG)	Anti–lock brake indicator, control
12	57 (BK)	Ground

C220b

14401

A30
Instrument cluster

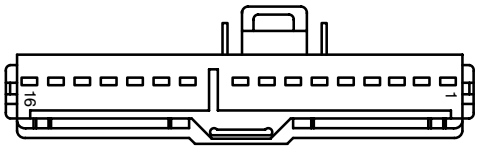

F16022

Pin	Circuit	Circuit function
1	198 (DG/OG)	Dual pressure switch (19D594), signal
2	–	not used
3	797 (LG/VT)	Voltage supplied at all times (overload protected)
4	–	not used
5	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
6	31 (WH/RD)	Engine oil pressure indicator, control
7	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
8	–	not used
9	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
10	29 (YE/WH)	Fuel pump/fuel gauge sender
11	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
12	648 (WH/PK)	Tachometer, signal
13	–	not used
14	2 (WH/LB)	Turn lamps, feed, right front
15	–	not used
16	3 (LG/WH)	Turn lamps, feed, left front