C290c

14B242

A11
Radio (18806)

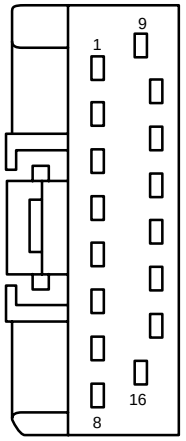

F16071

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	1000 (RD/BK)	Voltage supplied in Start (overload protected)
4	651 (BK/YE)	Ground
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	797 (LG/VT)	Voltage supplied at all times (overload protected)
10	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	Ground
12	800 (GY/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) –
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	694 (BK/LG)	Ground

C300

14A005

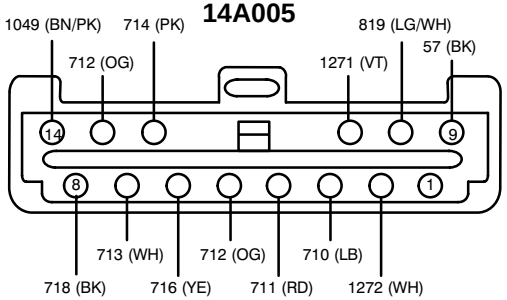

F14015

14A009 six–passenger model, with heat
19A442 six–passenger model, with cell phone
14A318 five–passenger model

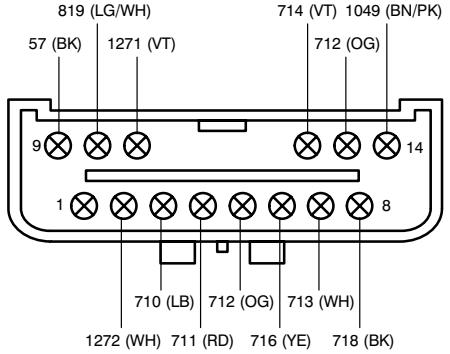

F14008

C301

18W862

A151
Antenna



F01012

Pin	Circuit	Circuit Function
1	186 (BN/LB)	Rear window defrost relay, switched power