C602

14A005

N240
Door ajar switch,
passenger side front
(14018)

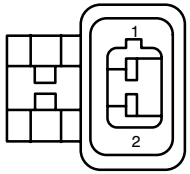

F02117

Pin	Circuit	Circuit function
1	761 (GY/RD)	switch sense, with remote keyless entry
	760 (PK/LB)	switch sense, without remote keyless entry
2	57 (BK)	Ground
	345 (BK/PK)	switch sense, with crew cab, without remote keyless entry

C603

14A005

M226
Door lock actuator,
passenger side
(218A42)

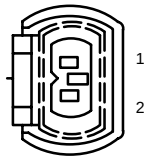

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C604

14A005

N105
Window adjust
switch, passenger
side

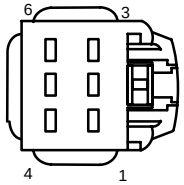

F06148

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front, Up
2	334 (RD/YE)	Window motor, feed, Down
3	193 (YE/LG)	switched power
	400 (LB/BK)	switched power – Pickup, without crew cab
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	314 (TN/LB)	Window switch, feed, right front, Down