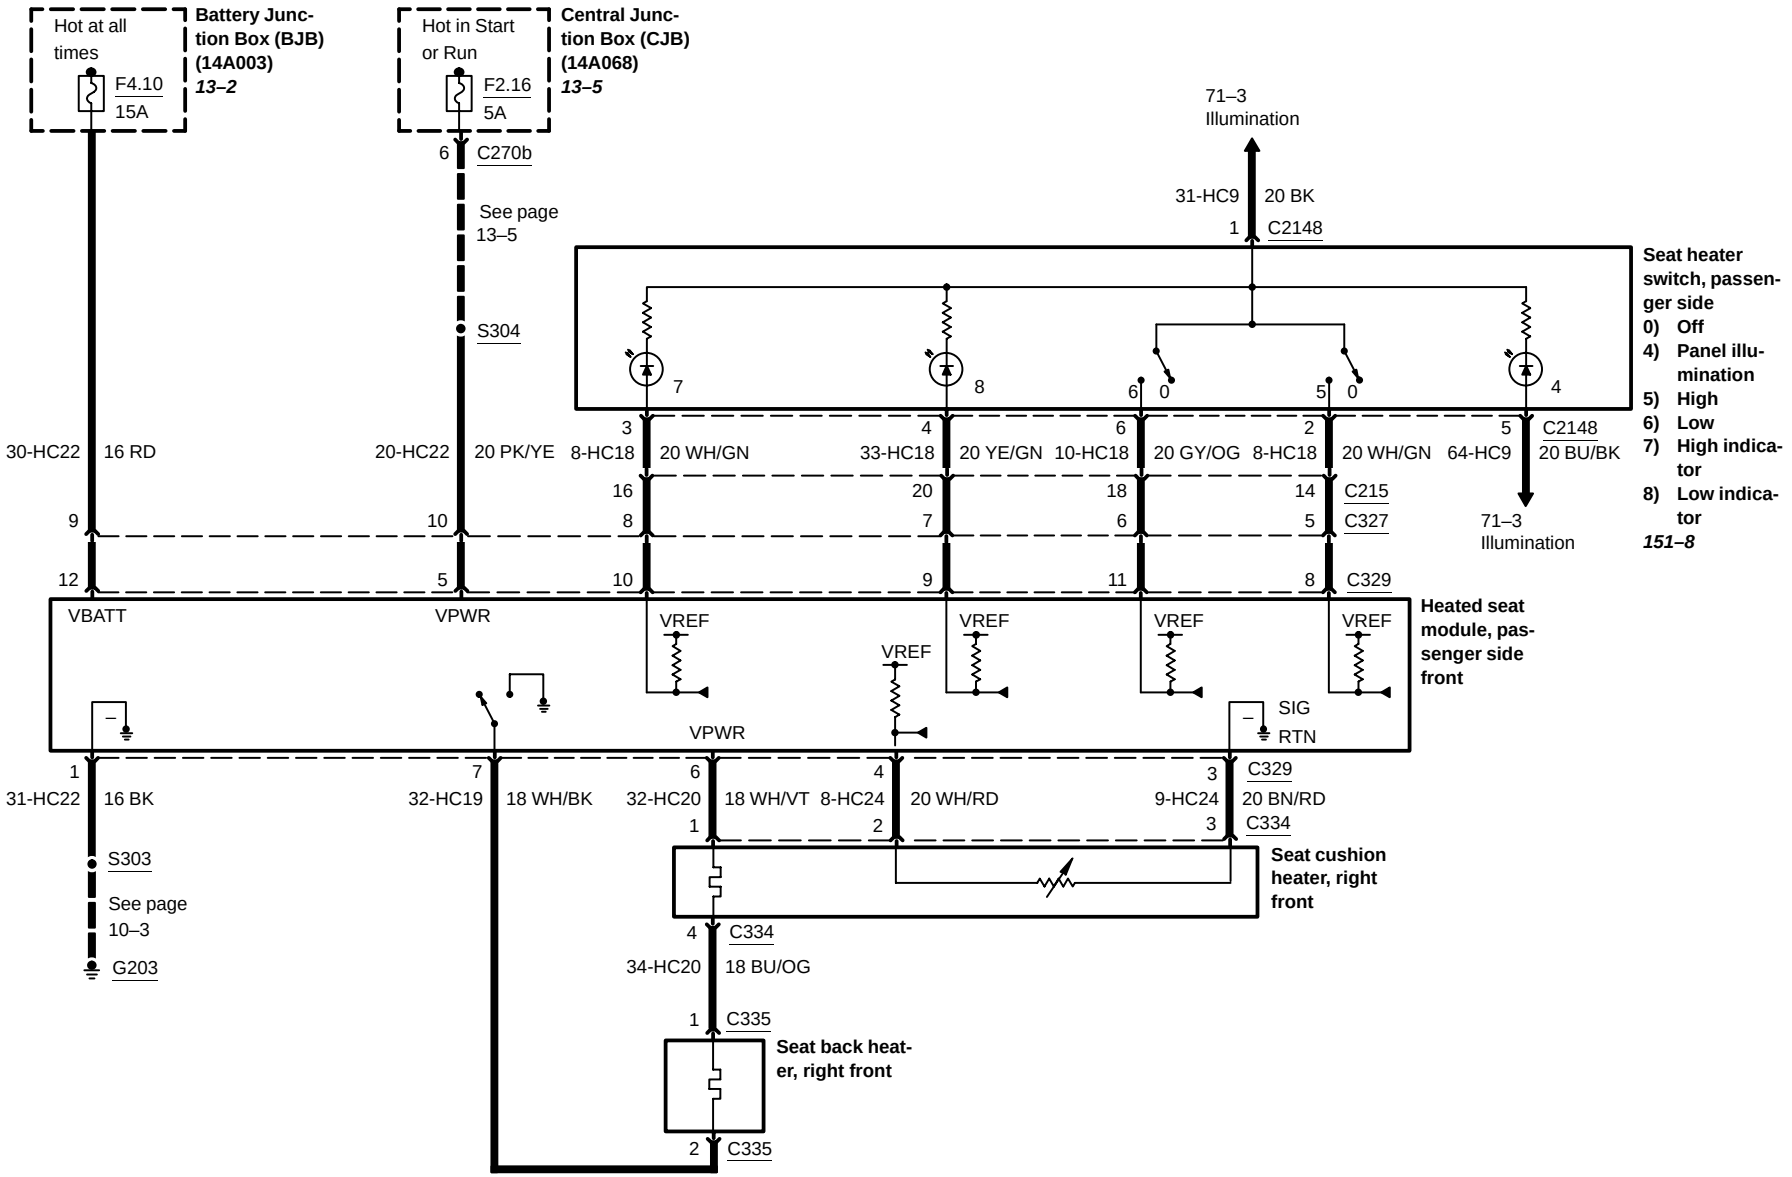
Hot at all times
F4.10
15A
Battery Junction Box (BJB) (14A003) 13–2
Hot in Start or Run
F2.16
5A
Central Junction Box (CJB) (14A068) 13–5
6 C270b
See page 13–5
S304
71–3 Illumination
31-HC9 20 BK
1 C2148
Seat heater switch, passenger side
0) Off
4) Panel illumination
5) High
6) Low
7) High indicator
8) Low indicator
151–8
30-HC22 16 RD
20-HC22 20 PK/YE
8-HC18 20 WH/GN
33-HC18 20 YE/GN
10-HC18 20 GY/OG
8-HC18 20 WH/GN
64-HC9 20 BU/BK
C215
C327
C329
71–3 Illumination
VBATT
VPWR
VREF
Heated seat module, passenger side front
SIG RTN
1 31-HC22 16 BK
7 32-HC19 18 WH/BK
6 32-HC20 18 WH/VT
8-HC24 20 WH/RD
9-HC24 20 BN/RD
C334
Seat cushion heater, right front
S303
See page 10–3
G203
34-HC20 18 BU/OG
C335
Seat back heater, right front