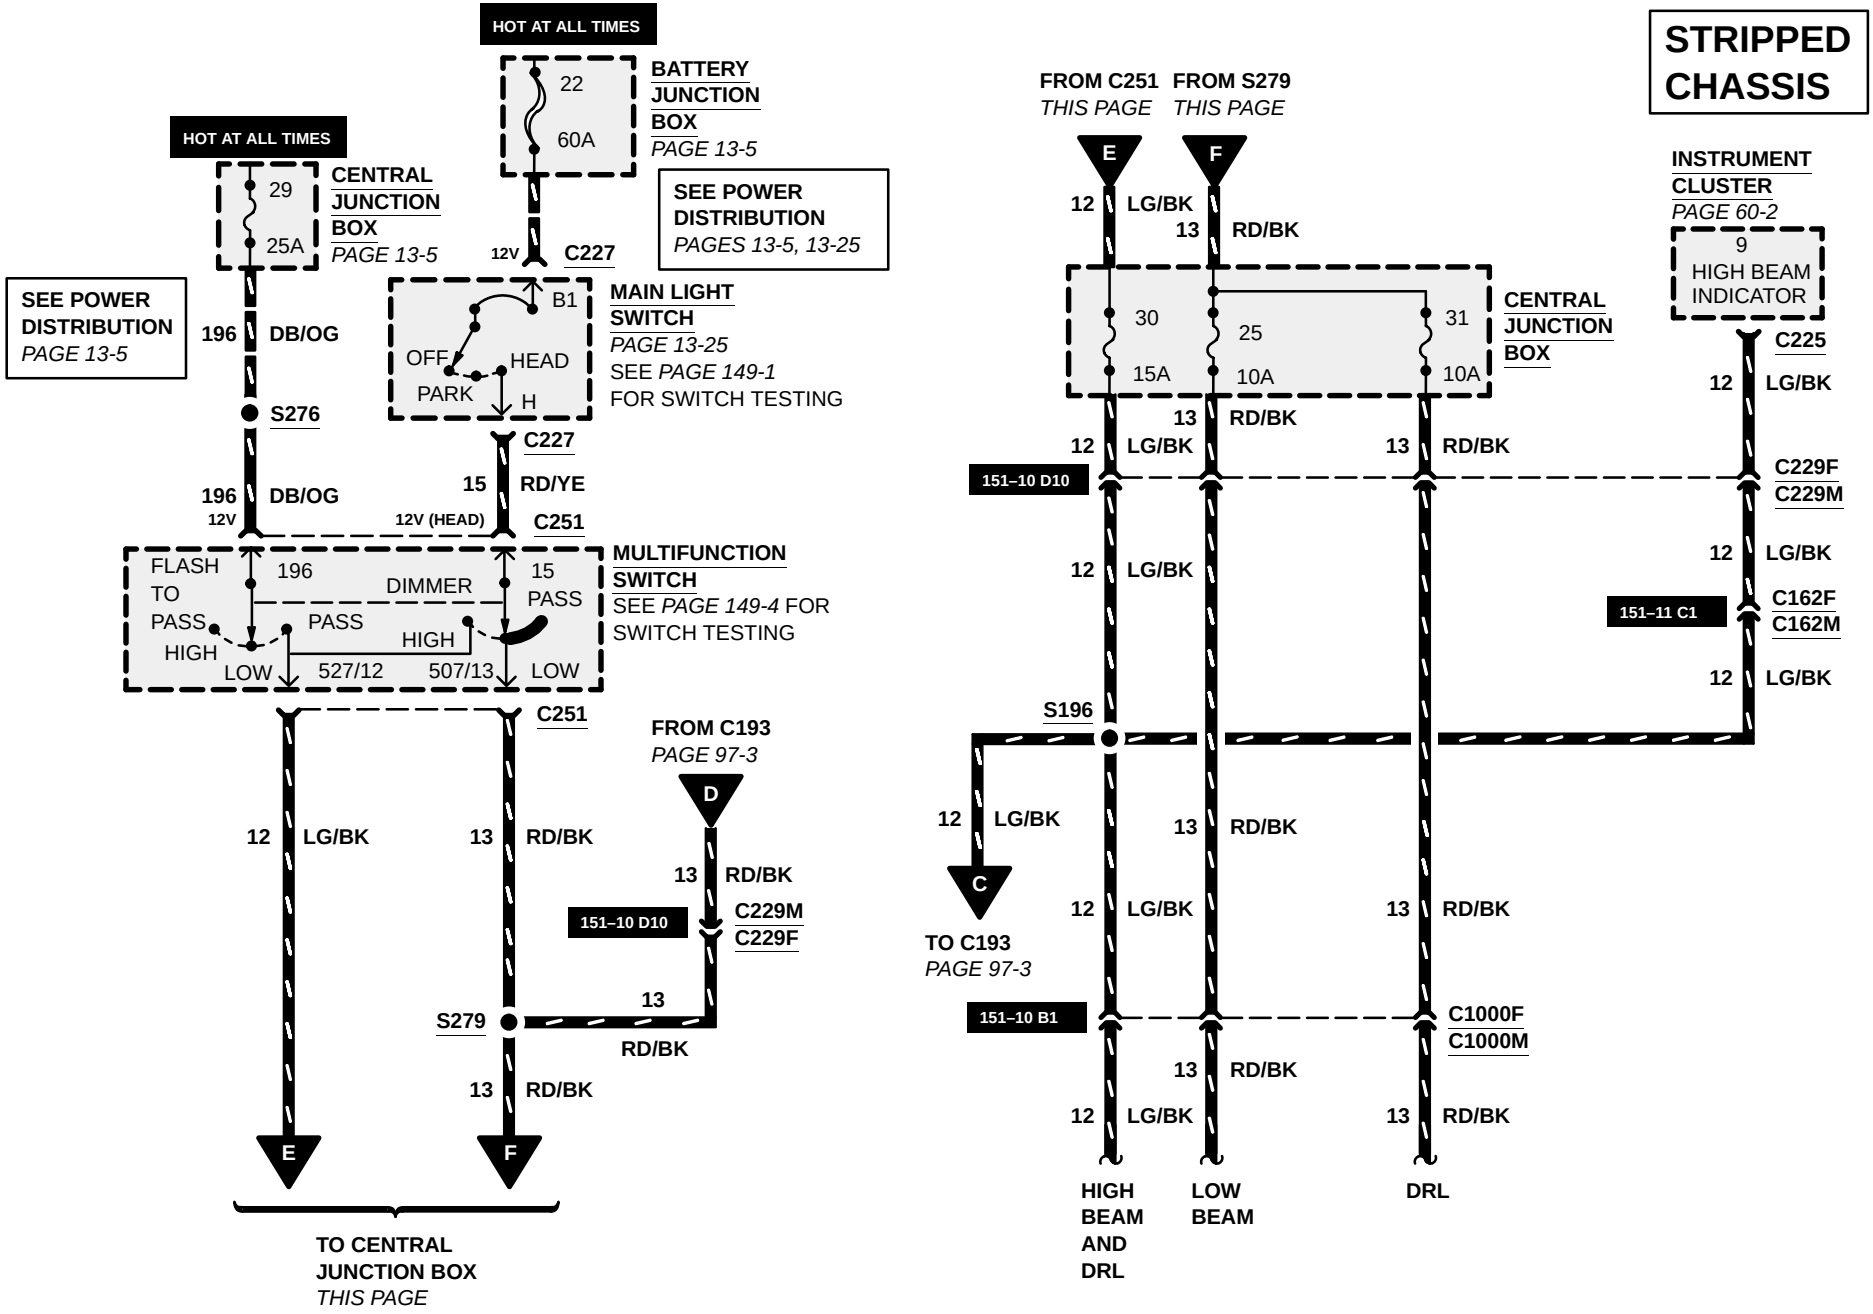
HOT AT ALL TIMES
22
60A
BATTERY JUNCTION BOX
PAGE 13-5
HOT AT ALL TIMES
29
25A
CENTRAL JUNCTION BOX
PAGE 13-5
SEE POWER DISTRIBUTION
PAGES 13-5, 13-25
12V
C227
SEE POWER DISTRIBUTION
PAGE 13-5
B1
MAIN LIGHT SWITCH
PAGE 13-25
SEE PAGE 149-1 FOR SWITCH TESTING
OFF
HEAD
PARK
H
196 DB/OG
S276
C227
15 RD/YE
196 DB/OG
12V
12V (HEAD)
C251
FLASH TO PASS
196
DIMMER
15 PASS
PASS
HIGH
LOW
527/12
507/13
LOW
MULTIFUNCTION SWITCH
SEE PAGE 149-4 FOR SWITCH TESTING
C251
FROM C193
PAGE 97-3
D
12 LG/BK
13 RD/BK
13 RD/BK
151–10 D10
C229M
C229F
13
S279
RD/BK
13 RD/BK
E
F
TO CENTRAL JUNCTION BOX
THIS PAGE
STRIPPED CHASSIS
FROM C251
THIS PAGE
FROM S279
THIS PAGE
E
F
12 LG/BK
13 RD/BK
30
25
31
15A
10A
10A
CENTRAL JUNCTION BOX
INSTRUMENT CLUSTER
PAGE 60-2
9
HIGH BEAM INDICATOR
C225
12 LG/BK
13 RD/BK
12 LG/BK
13 RD/BK
151–10 D10
C229F
C229M
12 LG/BK
12 LG/BK
151–11 C1
C162F
C162M
12 LG/BK
S196
12 LG/BK
C
TO C193
PAGE 97-3
13 RD/BK
12 LG/BK
13 RD/BK
151–10 B1
C1000F
C1000M
13 RD/BK
12 LG/BK
13 RD/BK
HIGH BEAM AND DRL
LOW BEAM
DRL