C3036b (BK)

14A699

Climate controlled seat module, passenger side



F04311

Pin	Circuit	Circuit function
1	1906 (VT)	UBP Bus
2	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
3	57 (BK)	Ground
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)

C3037 (GY)

14B079

Climate controlled seat switch, passenger side

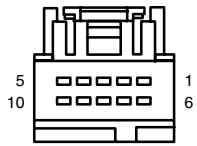

F10135

Pin	Circuit	Circuit function
1	19 (LB/RD)	Illumination, Power
2	1551 (VT/WH)	Climate controlled seat switch, heat, switch sense
3	–	not used
4	57 (BK)	Ground
5	57 (BK)	Ground
6	1974 (LB)	Climate controlled seat switch, cool, indicator, control
7	1550 (WH/OG)	Climate controlled seat switch, cool, switch sense
8	1973 (RD)	Climate controlled seat switch, heat, indicator, control
9	1019 (TN/LB)	Climate controlled seat switch, Temperature, signal –
10	1018 (LG/OG)	Climate controlled seat switch, Temperature, signal +

C3038 (GY)

14A699

Climate controlled seat fan, passenger side

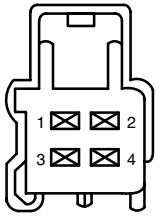

F04105

Pin	Circuit	Circuit function
1	1565 (VT)	Climate controlled seat fan, passenger side, signal
2	1554 (WH)	Climate controlled seat fan, passenger side, signal
3	1552 (RD)	Climate controlled seat fan, passenger side, motor +
4	1553 (BK)	Climate controlled seat fan, passenger side, motor –