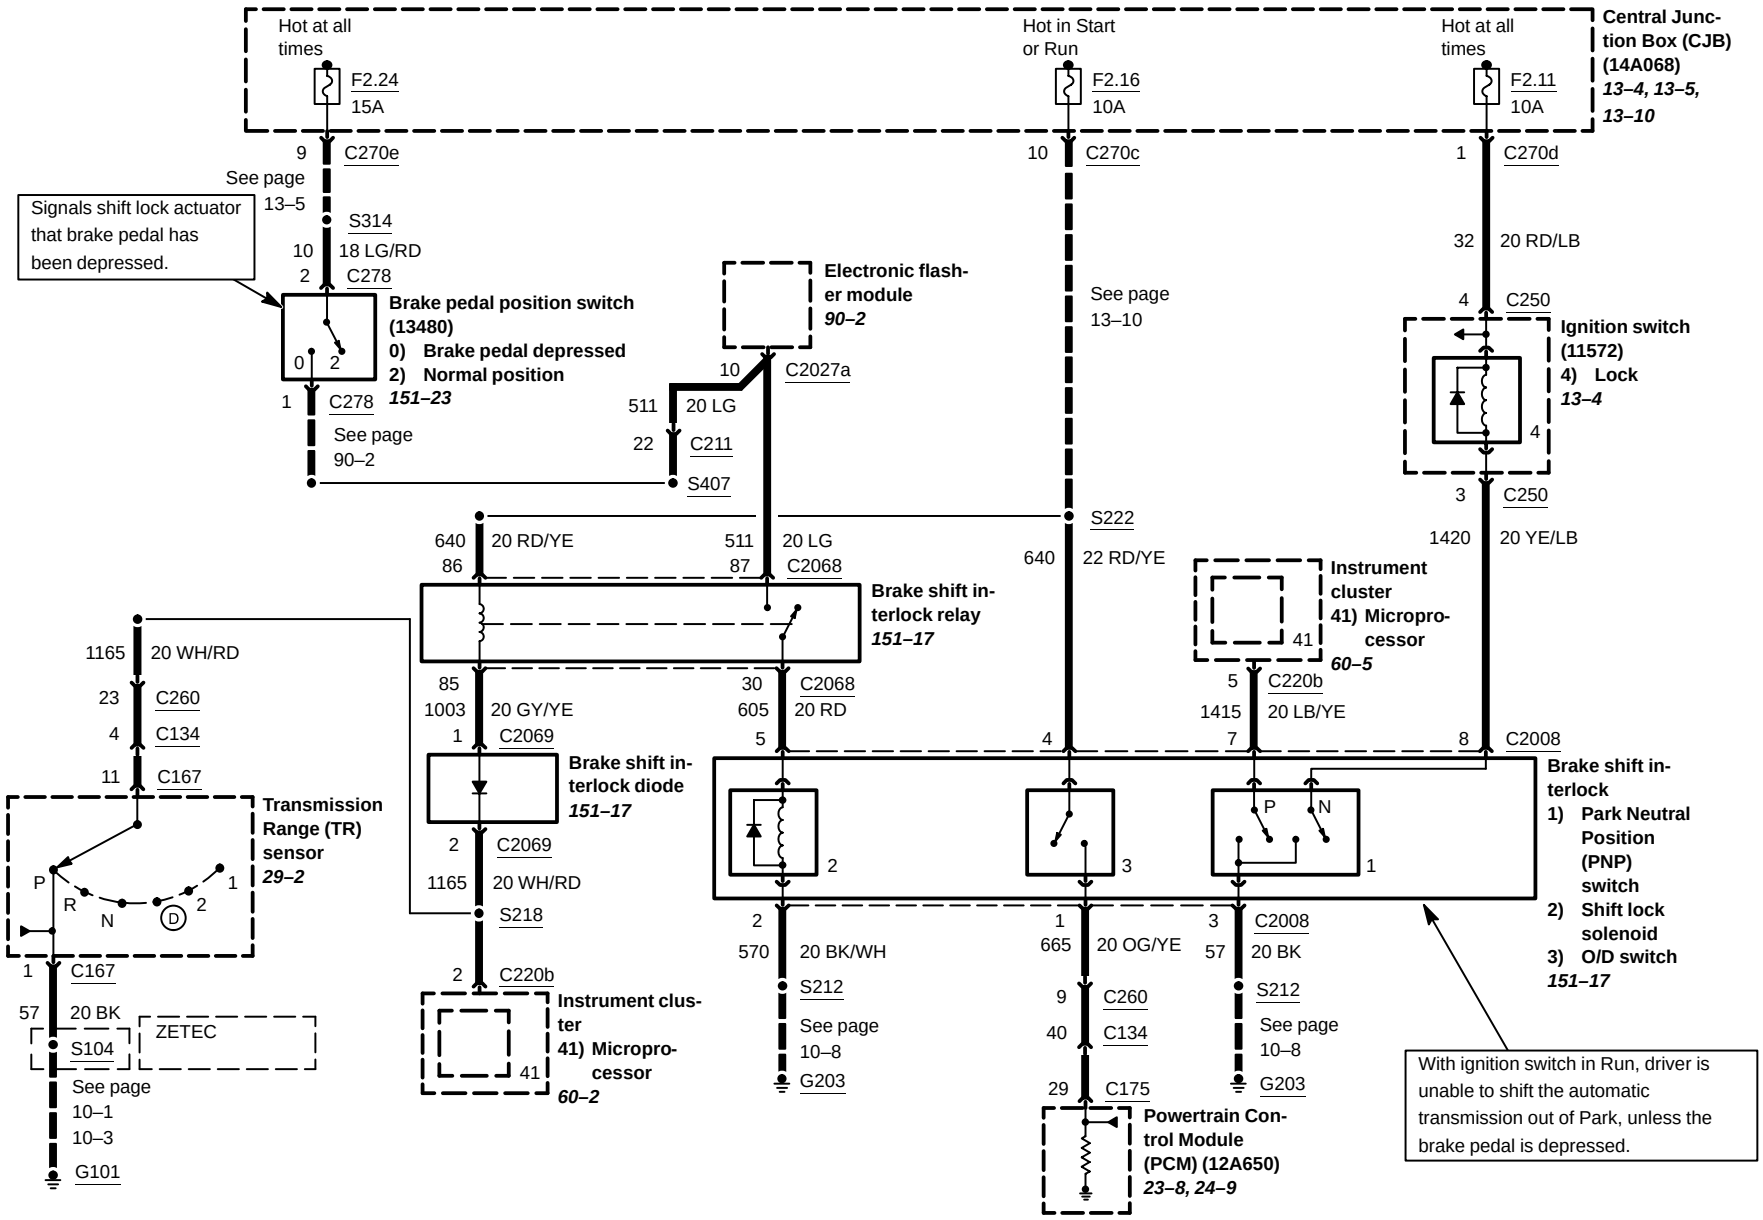
Hot at all times
F2.24
15A
Hot in Start or Run
F2.16
10A
Hot at all times
F2.11
10A
Central Junction Box (CJB) (14A068)
13–4, 13–5, 13–10
9 C270e
See page 13–5
10 C270c
1 C270d
Signals shift lock actuator that brake pedal has been depressed.
S314
10 18 LG/RD
2 C278
Brake pedal position switch (13480)
0) Brake pedal depressed
2) Normal position
151–23
0 2
1 C278
See page 90–2
Electronic flasher module
90–2
10 C2027a
511 20 LG
22 C211
S407
See page 13–10
32 20 RD/LB
4 C250
Ignition switch (11572)
4) Lock
13–4
4
3 C250
1420 20 YE/LB
640 20 RD/YE
511 20 LG
86 87 C2068
Brake shift interlock relay
151–17
S222
640 22 RD/YE
Instrument cluster
41) Microprocessor
60–5
41
1165 20 WH/RD
23 C260
4 C134
11 C167
85 30 C2068
1003 20 GY/YE
605 20 RD
5 C220b
1415 20 LB/YE
1 C2069
5 4 7 8 C2008
Brake shift interlock diode
151–17
Brake shift interlock
1) Park Neutral Position (PNP) switch
2) Shift lock solenoid
3) O/D switch
151–17
2 C2069
1165 20 WH/RD
S218
2 C220b
Transmission Range (TR) sensor
29–2
P R N D 1 2
2 3 1
P N
1 C167
57 20 BK
S104
ZETEC
See page 10–1 10–3
G101
2 570 20 BK/WH
S212
See page 10–8
G203
1 665 20 OG/YE
9 C260
40 C134
29 C175
3 C2008
57 20 BK
S212
See page 10–8
G203
Instrument cluster
41) Microprocessor
60–2
41
Powertrain Control Module (PCM) (12A650)
23–8, 24–9
With ignition switch in Run, driver is unable to shift the automatic transmission out of Park, unless the brake pedal is depressed.