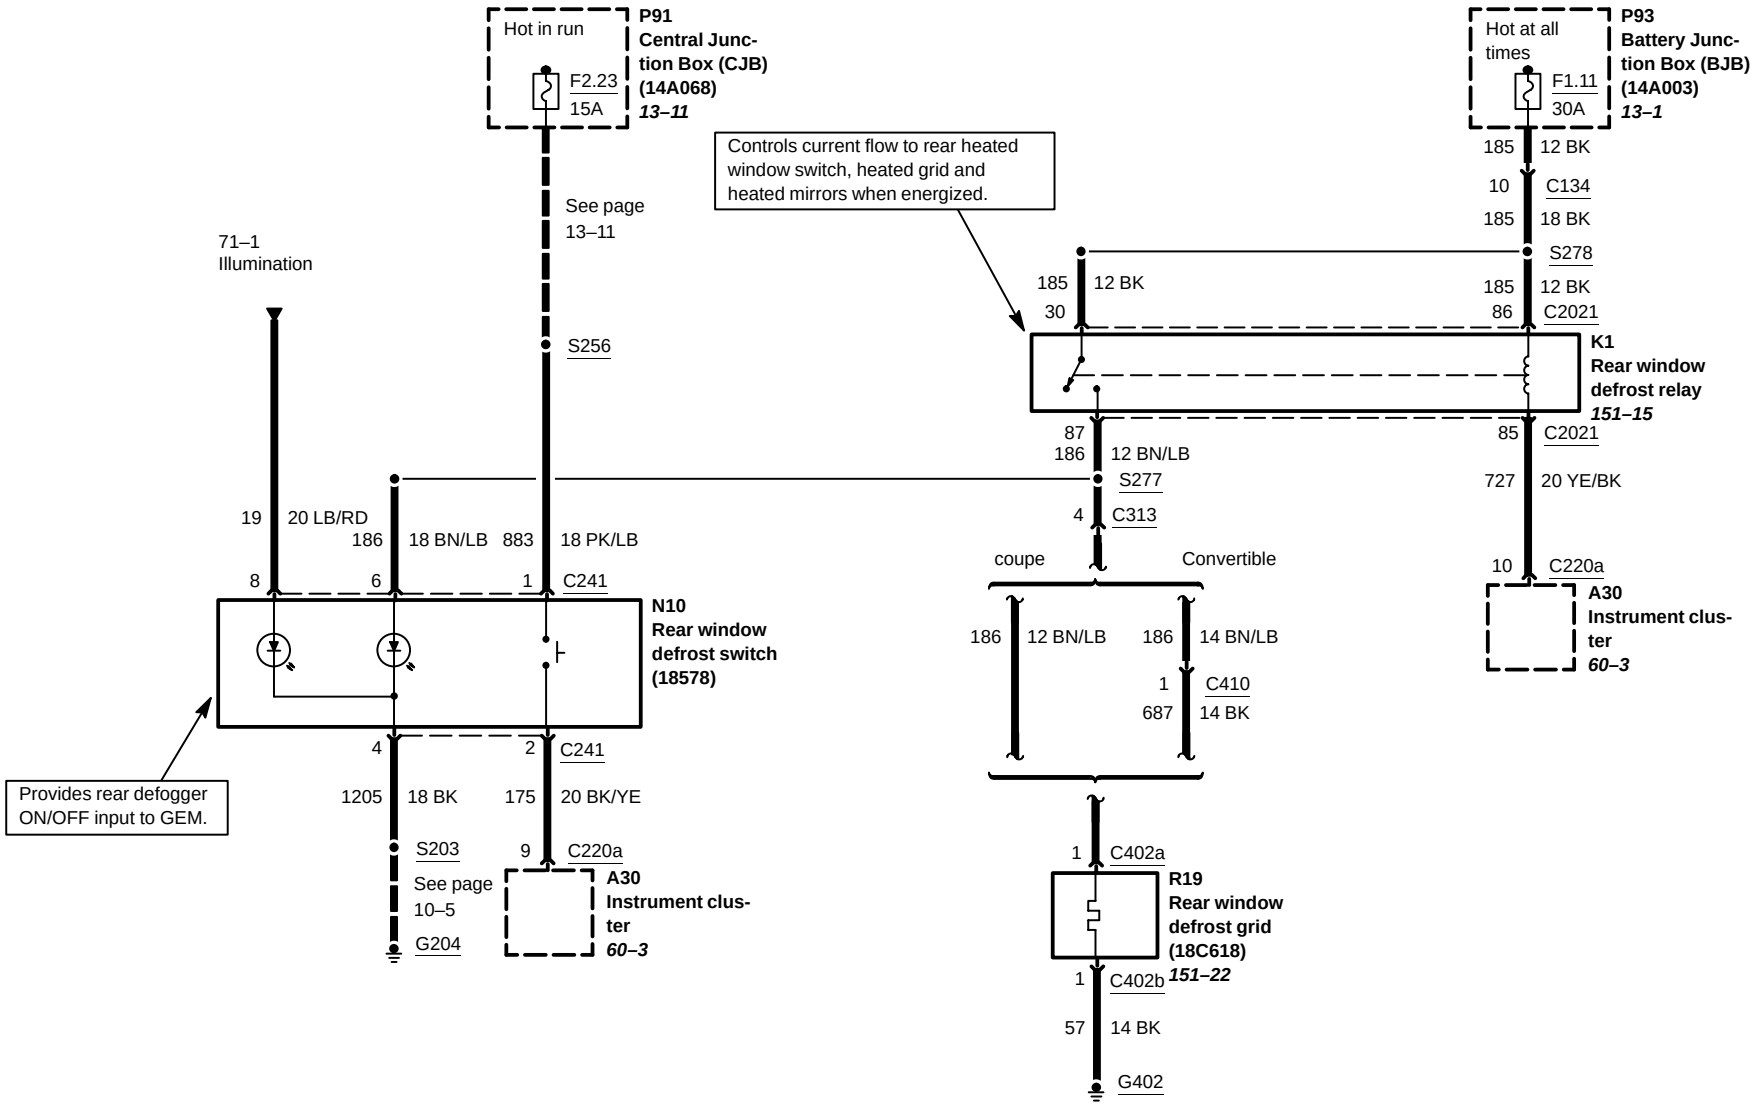
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–11
F2.23
15A
See page 13–11
S256
71–1
Illumination
19 20 LB/RD
186 18 BN/LB
883 18 PK/LB
8
6
1
C241
N10
Rear window defrost switch
(18578)
4
2
C241
1205 18 BK
175 20 BK/YE
S203
See page 10–5
G204
9
C220a
A30
Instrument cluster
60–3
Provides rear defogger ON/OFF input to GEM.
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
185 12 BK
30
86
C2021
K1
Rear window defrost relay
151–15
87
186 12 BN/LB
S277
4
C313
coupe
Convertible
186 12 BN/LB
186 14 BN/LB
1
C410
687 14 BK
1
C402a
R19
Rear window defrost grid
(18C618)
151–22
1
C402b
57 14 BK
G402
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–1
F1.11
30A
185 12 BK
10
C134
185 18 BK
S278
185 12 BK
85
C2021
727 20 YE/BK
10
C220a
A30
Instrument cluster
60–3