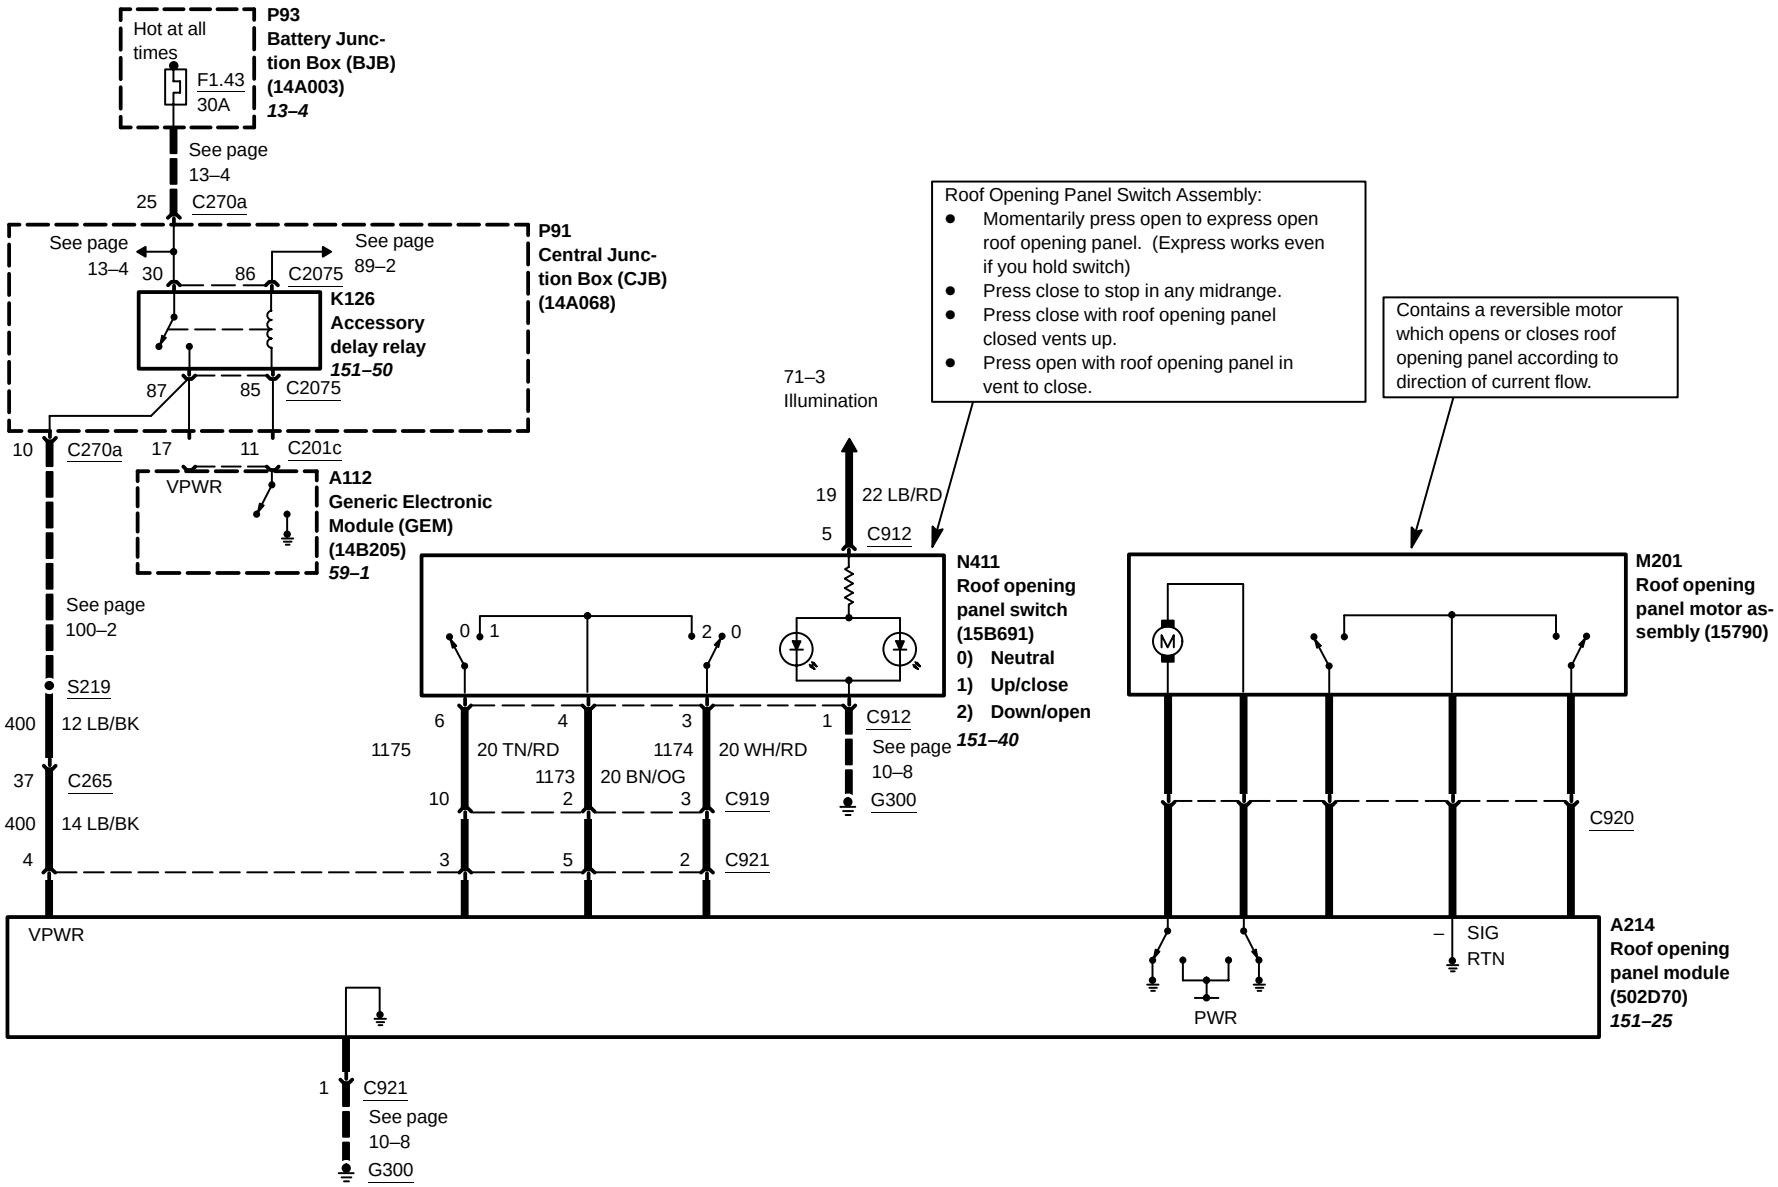
Hot at all times
F1.43
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
See page 13–4
25
C270a
See page 13–4
30
86
C2075
See page 89–2
K126
Accessory delay relay
151–50
87
85
C2075
P91
Central Junction Box (CJB)
(14A068)
10
C270a
17
11
C201c
VPWR
A112
Generic Electronic Module (GEM)
(14B205)
59–1
See page 100–2
S219
400
12 LB/BK
37
C265
400
14 LB/BK
4
71–3
Illumination
19
22 LB/RD
5
C912
Roof Opening Panel Switch Assembly:
Momentarily press open to express open roof opening panel. (Express works even if you hold switch)
Press close to stop in any midrange.
Press close with roof opening panel closed vents up.
Press open with roof opening panel in vent to close.
Contains a reversible motor which opens or closes roof opening panel according to direction of current flow.
N411
Roof opening panel switch
(15B691)
0) Neutral
1) Up/close
2) Down/open
151–40
M201
Roof opening panel motor assembly (15790)
6
4
3
1
C912
See page 10–8
G300
1175
20 TN/RD
1173
20 BN/OG
1174
20 WH/RD
10
2
3
C919
3
5
2
C921
C920
VPWR
A214
Roof opening panel module
(502D70)
151–25
SIG
RTN
PWR
1
C921
See page 10–8
G300