C511

14B121

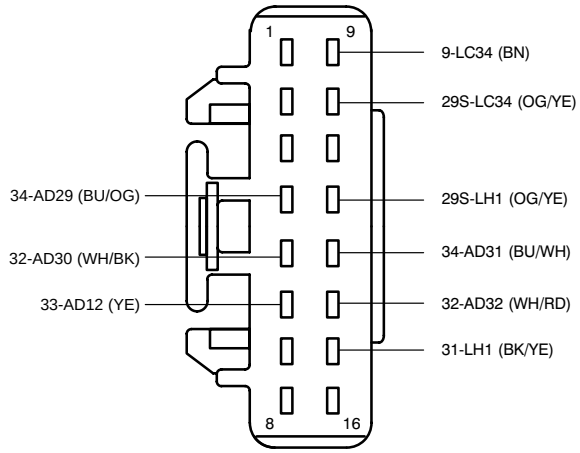

F16055

14A005

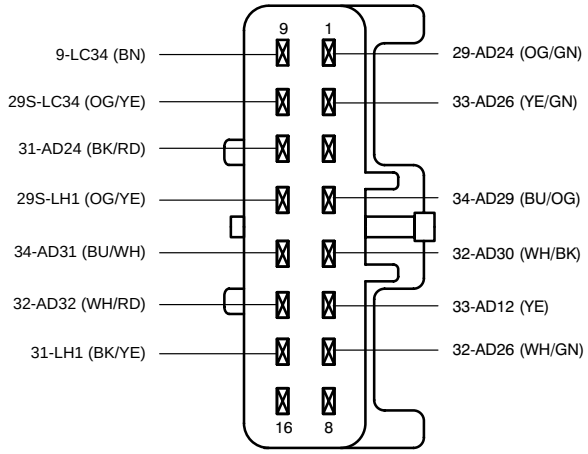

F16030

C520

14631

M220
Exterior rear view
mirror, driver side

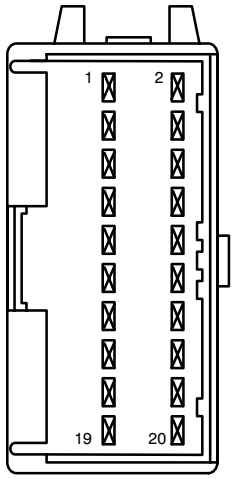

F20015

Pin	Circuit	Circuit Function
1	8-AD18 (WH/BK)	Sensor signal
2	32-AD7 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	9-AD18 (BN/YE)	Sensor signal return (reference/ground)
4	33-AD7 (YE/RD)	Switched between: Battery voltage, Ground or Open
5	10-AD18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
6	35-AD8 (VT)	Switched between: Battery voltage, Ground or Open
7	7-AD18 (YE/BK)	Voltage D.C. supplied at all times (sensor)
8	34-AD8 (BU/WH)	Switched between: Battery voltage, Ground or Open
9	29-HB35 (OG/BK)	Voltage supplied at all times (overload protected)
10	31-HB35 (BK/GN)	Ground
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	33-AD27 (YE/GN)	Switched between: Battery voltage, Ground or Open
16	32-AD27 (WH/GN)	Switched between: Battery voltage, Ground or Open
17	–	not used
18	–	not used
19	–	not used
20	–	not used