C527

14A005

N409
Exterior rear view mirror switch (17B676)

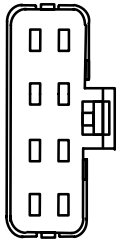

F08265

Pin	Circuit	Circuit function
1	54 (LG/YE)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Voltage supplied at all times (overload protected)
4	540 (RD)	Right/Left mirror movement
5	27 (BK)	Ground
6	542 (YE)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement, Left
8	544 (VT)	Up/Down mirror movement, Right

C535b

14A005

N447
Master window adjust switch (14529)

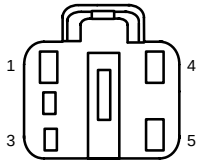

F05157

Pin	Circuit	Circuit function
1	296 (WH/VT)	Fused accessory relay, switched power, output
2	57 (BK)	Ground
3	314 (TN/LB)	Window switch, feed, right front, Up
4	57 (BK)	Ground
5	313 (WH/YE)	Window switch, feed, right front, Up

C535a

14A005

N447
Master window adjust switch (14529)

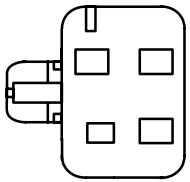

F04337

Pin	Circuit	Circuit function
1	995 (GY)	Window motor, feed, Down
2	992 (WH/BK)	Master window adjust switch (14529), feed, Up
3	991 (TN/LB)	Master window adjust switch (14529), feed, Down
4	170 (RD/LB)	Window lockout, switched power, output

C602

19A123/14A005

N85
Door ajar switch, right front

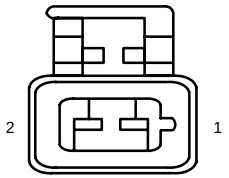

F02379

Pin	Circuit	Circuit function
1	345 (BK/PK)	Door ajar switch, right front, signal
2	57 (BK)	Ground