C433 (BK)

14405

A31
Fuel tank unit
(9H307)

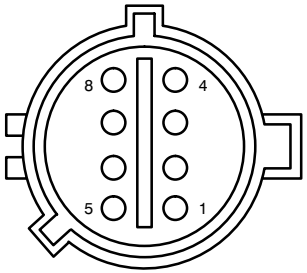

F08052

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
3	359 (GY/RD)	signal, return
4	–	not used
5	570 (BK/WH)	Ground
6	787 (PK/BK)	Fuel pump, Power
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel pump/fuel gauge sender

C435 (GY)

14405

B113
Fuel tank pressure
transducer sensor
(9C968)

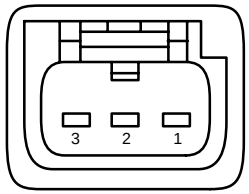

F03161

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)

C439

14405

E201
Trailer tow connec-
tor (15A416)

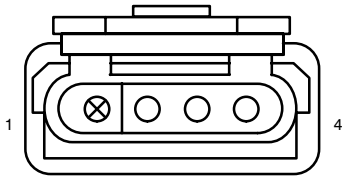

F04211

Pin	Circuit	Circuit function
1	206 (WH)	Trailer tow connector (15A416), Ground
2	962 (BN/WH)	Trailer tow relay, switched output
3	52 (YE)	Turn lamps, feed, left rear
4	64 (DG)	Turn lamps, feed, right rear

C450

14405

Y131
Evaporative emis-
sion (EVAP) canis-
ter vent valve
(9F945)

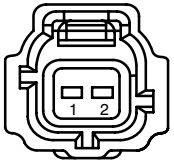

F02101

Pin	Circuit	Circuit function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C451 (GN)

13A409
14A005
14A488

E105
Reversing lamp, left
(13411)

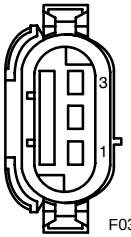

F03099

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse