PIN	CIRCUIT	CIRCUIT FUNCTION
92	511 (LG)	Brake Pedal Position (BPP) Switch Input
93	387 (RD/WH)	HEGO #11 Voltage Monitor
94	388 (YE/LB)	HEGO #21 Voltage Monitor
95	389 (WH/BK)	HEGO #12 Voltage Monitor
96	–	NOT USED
97	361 (RD)	Power Input
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LB)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	1030 (DG/VT)	Coil On Plug #4
103	570 (BK/WH)	Ground
104	1028 (WH/PK)	Coil On Plug #3

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C114	30-8
C115	29-5, 30-8
C224	60-7
C225	60-7

6.8L

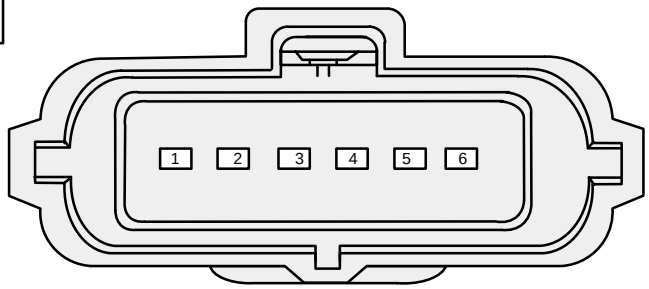

C1029

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	359 (GY/RD)	Sensor Signal Return
2	361 (RD)	Power Input
3	570 (BK/WH)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
5	967 (LB/RD)	Mass Air Flow (MAF) Sensor
6	743 (GY)	Intake Air Temperature (IAT Sensor)