Seat adjust switch, driver side front (14A701)

Schematic

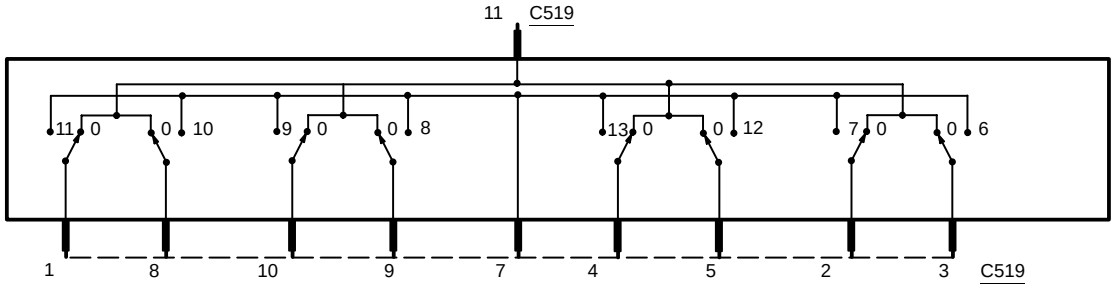

Seat adjust switch, driver side front (14A701)

0) Rest
6) Backrest forward
7) Backrest rearward
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	11 and 1, 2, 3, 4, 5, 8, 9, 10	Rest	Closed circuit
	7 and 1, 2, 3, 4, 5, 8, 9, 10	Rest	Open circuit
Front height circuit	11 and 1 7 and 8	Up	Closed circuit
		Down	Open circuit
	11 and 8 7 and 1	Up	Open circuit
		Down	Closed circuit
Rear height circuit	11 and 4 7 and 5	Up	Closed circuit
		Down	Open circuit
	11 and 5 7 and 4	Up	Open circuit
		Down	Closed circuit
Forward/rearward circuit	11 and 9 7 and 10	Forward	Open circuit
		Rearward	Closed circuit
	11 and 10 7 and 9	Forward	Closed circuit
		Rearward	Open circuit
Backrest circuit	11 and 3 7 and 2	Forward	Open circuit
		Rearward	Closed circuit
	11 and 2 7 and 3	Forward	Closed circuit
		Rearward	Open circuit

Terminals

C519

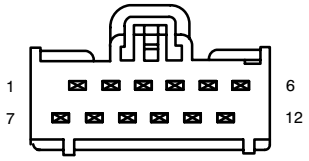

F12137