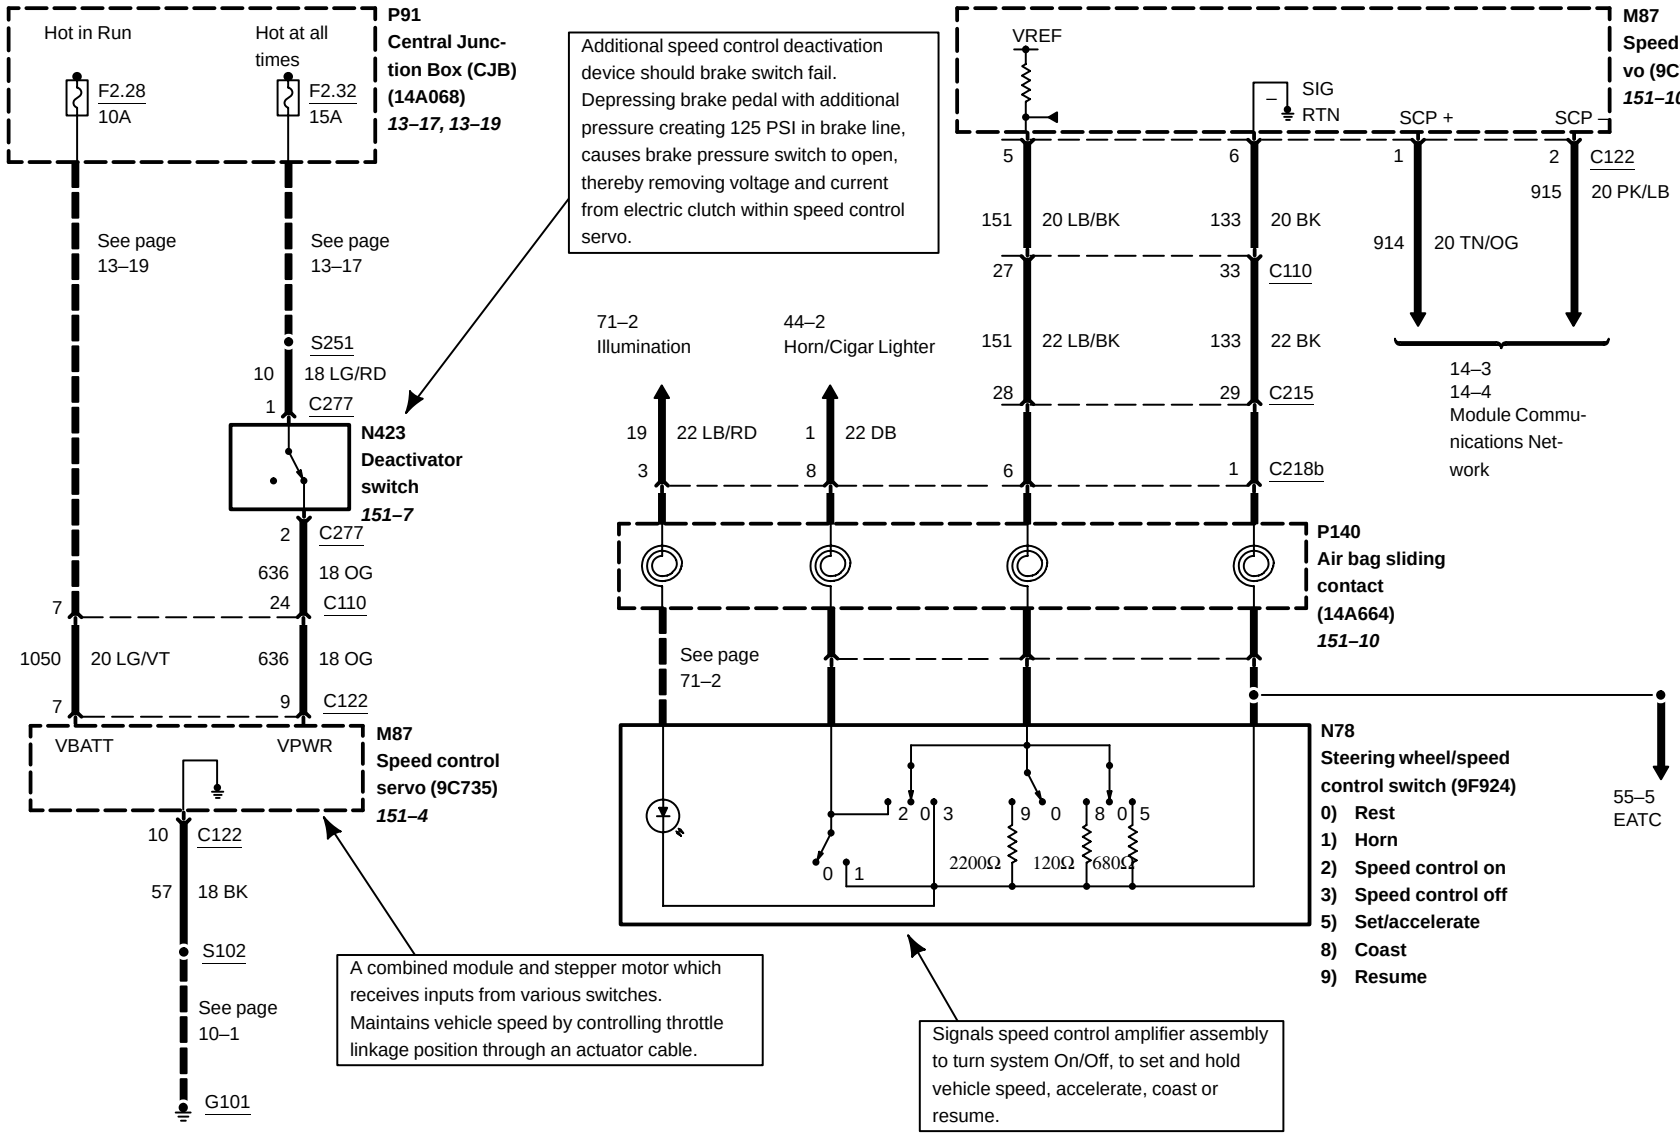
Hot in Run
Hot at all times
F2.28
10A
F2.32
15A
P91
Central Junction Box (CJB)
(14A068)
13–17, 13–19
See page 13–19
See page 13–17
S251
10 18 LG/RD
1 C277
N423
Deactivator switch
151–7
2 C277
636 18 OG
7 24 C110
1050 20 LG/VT
636 18 OG
7 9 C122
VBATT
VPWR
M87
Speed control servo (9C735)
151–4
10 C122
57 18 BK
S102
See page 10–1
G101
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
A combined module and stepper motor which receives inputs from various switches. Maintains vehicle speed by controlling throttle linkage position through an actuator cable.
VREF
SIG RTN
SCP +
SCP –
M87
Speed control servo (9C735)
151–10
5 6 1 2 C122
915 20 PK/LB
151 20 LB/BK
133 20 BK
914 20 TN/OG
27 33 C110
14–3
14–4
Module Communications Network
71–2
Illumination
44–2
Horn/Cigar Lighter
151 22 LB/BK
133 22 BK
28 29 C215
19 22 LB/RD
1 22 DB
3 8 6 1 C218b
P140
Air bag sliding contact
(14A664)
151–10
See page 71–2
2200Ω
120Ω
680Ω
N78
Steering wheel/speed control switch (9F924)
0) Rest
1) Horn
2) Speed control on
3) Speed control off
5) Set/accelerate
8) Coast
9) Resume
55–5
EATC
Signals speed control amplifier assembly to turn system On/Off, to set and hold vehicle speed, accelerate, coast or resume.