C2220b (WH)

* Natural Gas Vehicle (NGV)
** Marauder

14401

Instrument cluster

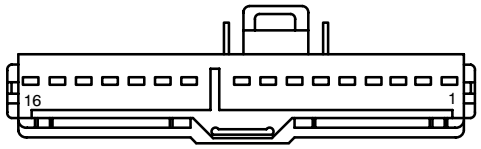

F16022

Pin	Circuit	Circuit function
1	484 (OG/BK)	Interior lamps, feed
	**640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	2 (WH/LB)	Turn lamps, feed, right front
	**679 (GY/BK)	Vehicle Speed Sensor (VSS) +
3	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
	**484 (OG/BK)	Interior lamps, feed
4	2 (WH/LB)	Turn lamps, feed, right front
5	676 (PK/OG)	Ground
	**911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
6	39 (RD/WH)	Engine Coolant Temperature (ECT) sensor (12A648), input
	**603 (DG)	Anti–lock brake indicator, Lamp
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
	*231 (BK/YE)	Accessory, feed, to, Instrument cluster
8	31 (WH/RD)	Engine oil pressure indicator
	**676 (PK/OG)	Ground
9	676 (PK/OG)	Ground
	**76 (LG/WH)	Tachometer, input
10	603 (DG)	Anti–lock brake indicator, Lamp
	**640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
11	977 (VT/WH)	Brake indicator
12	608 (BK/YE)	Air bag indicator, Warning, Lamp
13	1270 (OG/RD)	cylinder head, Temperature, indicator, Lamp
14	12 (LG/BK)	High beam lamp, Power, feed
15	57 (BK)	Ground
16	484 (OG/BK)	Interior lamps, feed

C2222

14401

Warning lamps module

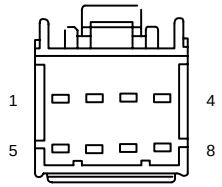

F08303

Pin	Circuit	Circuit function
1	608 (BK/YE)	Air bag indicator, Warning, Lamp
2	603 (DG)	Anti–lock brake indicator, Lamp
3	977 (VT/WH)	Brake indicator
4	383 (RD/WH)	Emergency warning flasher, feed
5	–	not used
6	–	not used
7	57 (BK)	Ground
8	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C2225

14B079

Voltmeter

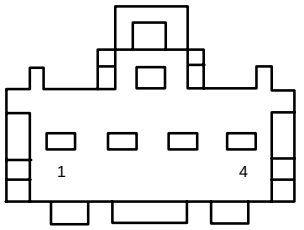

F04349

Pin	Circuit	Circuit function
1	484 (OG/BK)	Interior lamps, feed
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	57 (BK)	Ground
4	–	not used