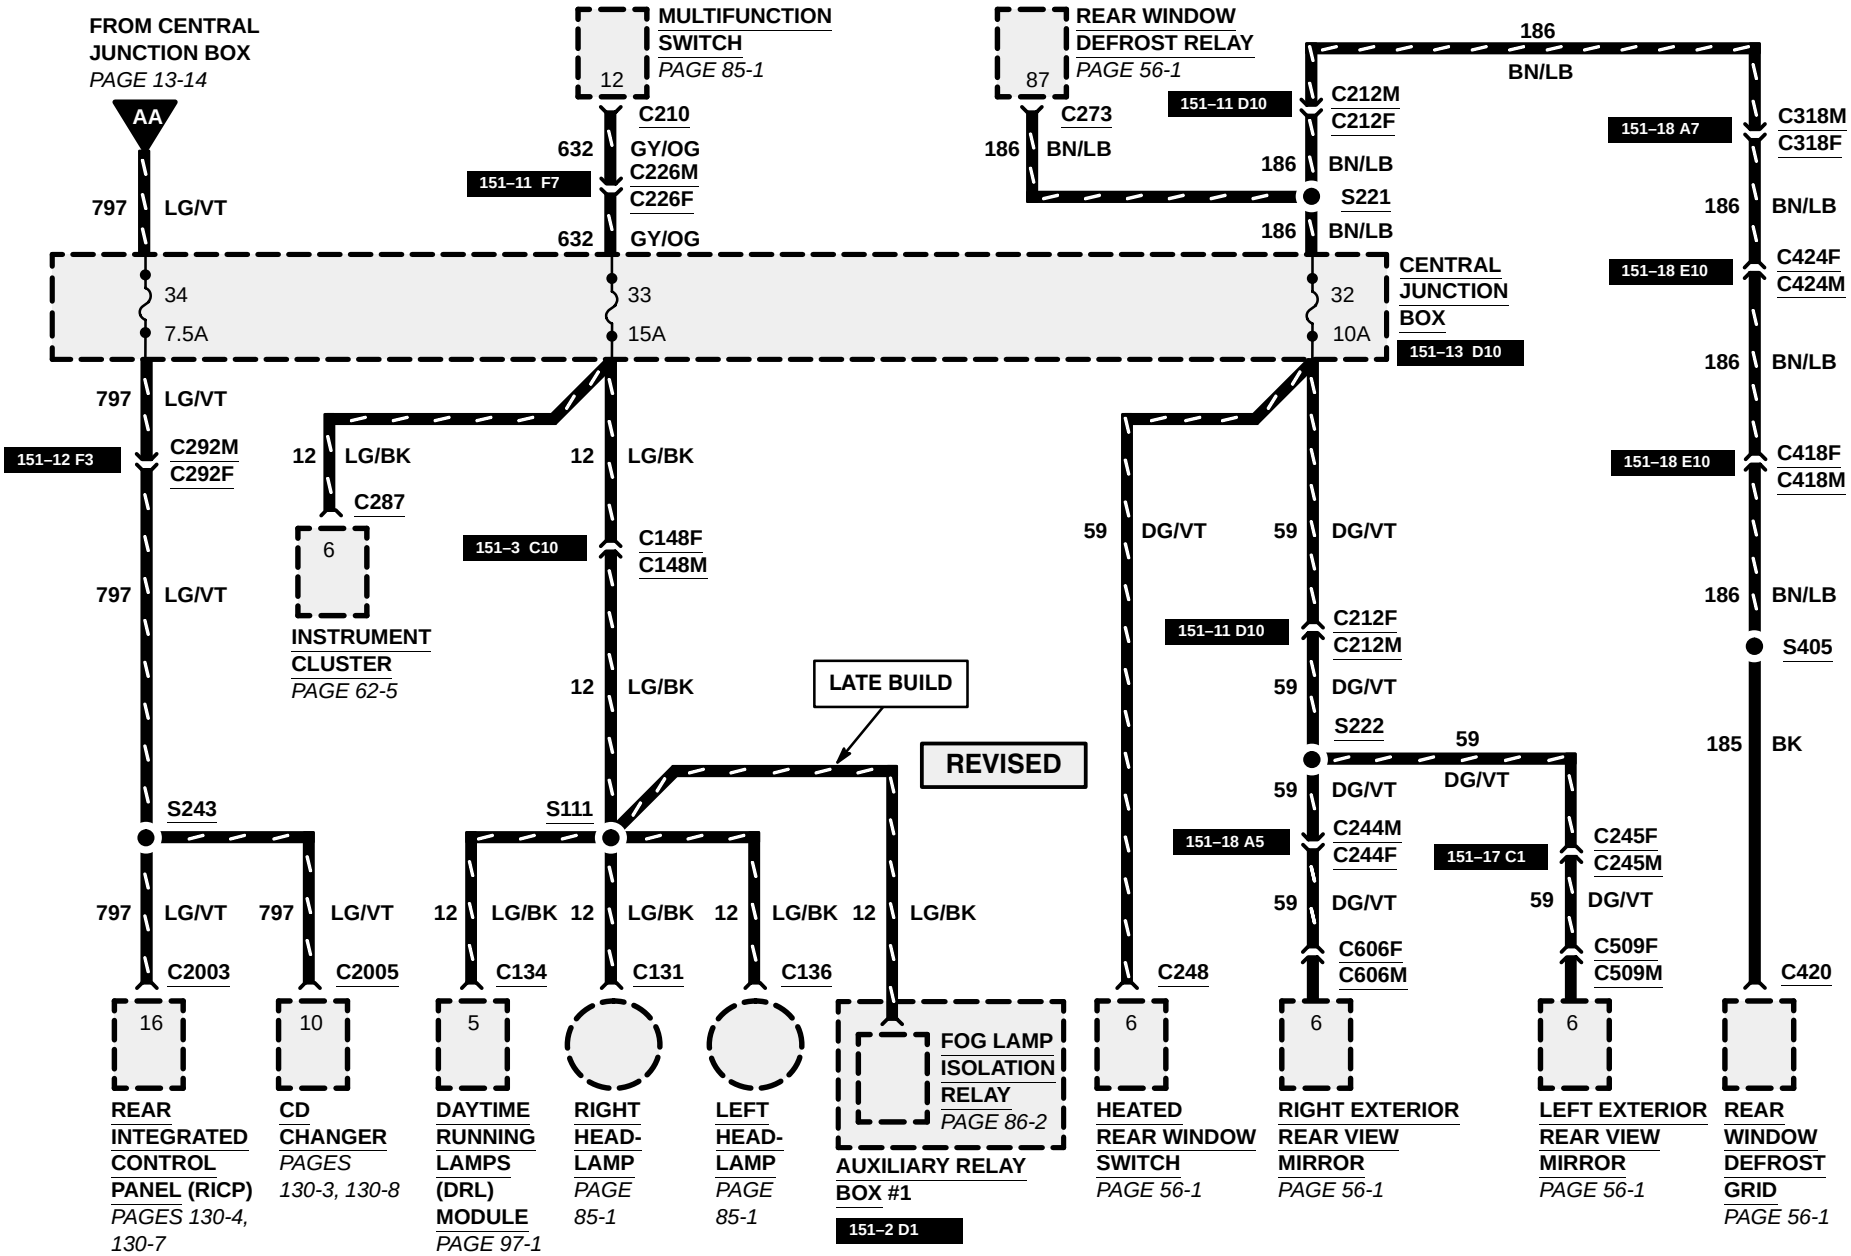
FROM CENTRAL JUNCTION BOX
PAGE 13-14
AA
797 LG/VT
MULTIFUNCTION SWITCH
PAGE 85-1
12
C210
632 GY/OG
151–11 F7
C226M
C226F
632 GY/OG
REAR WINDOW DEFROST RELAY
PAGE 56-1
87
C273
186 BN/LB
186 BN/LB
151–11 D10
C212M
C212F
186 BN/LB
S221
186 BN/LB
186 BN/LB
151–18 A7
C318M
C318F
186 BN/LB
151–18 E10
C424F
C424M
186 BN/LB
151–18 E10
C418F
C418M
186 BN/LB
S405
185 BK
C420
CENTRAL JUNCTION BOX
151–13 D10
34
7.5A
33
15A
32
10A
797 LG/VT
151–12 F3
C292M
C292F
797 LG/VT
12 LG/BK
C287
6
INSTRUMENT CLUSTER
PAGE 62-5
12 LG/BK
151–3 C10
C148F
C148M
12 LG/BK
LATE BUILD
REVISED
59 DG/VT
59 DG/VT
151–11 D10
C212F
C212M
59 DG/VT
S222
59 DG/VT
59 DG/VT
151–18 A5
C244M
C244F
59 DG/VT
C606F
C606M
59 DG/VT
151–17 C1
C245F
C245M
59 DG/VT
C509F
C509M
S243
S111
797 LG/VT
797 LG/VT
12 LG/BK
12 LG/BK
12 LG/BK
12 LG/BK
C2003
C2005
C134
C131
C136
C248
16
10
5
6
6
6
REAR INTEGRATED CONTROL PANEL (RICP)
PAGES 130-4, 130-7
CD CHANGER
PAGES 130-3, 130-8
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-1
RIGHT HEAD-LAMP
PAGE 85-1
LEFT HEAD-LAMP
PAGE 85-1
FOG LAMP ISOLATION RELAY
PAGE 86-2
AUXILIARY RELAY BOX #1
151–2 D1
HEATED REAR WINDOW SWITCH
PAGE 56-1
RIGHT EXTERIOR REAR VIEW MIRROR
PAGE 56-1
LEFT EXTERIOR REAR VIEW MIRROR
PAGE 56-1
REAR WINDOW DEFROST GRID
PAGE 56-1