C530

14631

A244
Key pad switch assembly

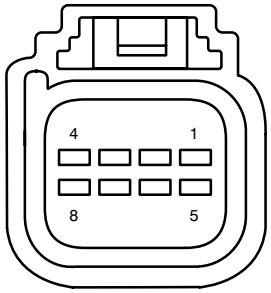

F08203

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad common
2	66 (LB)	Key pad common
3	79 (LG/RD)	Key pad common
4	–	not used
5	57 (BK)	Ground
6	124 (BN)	Key pad common
7	121 (YE/BK)	Key pad common
8	–	not used

C602a

14630

N240
Door ajar switch, passenger side front (14018)

F01065

Pin	Circuit	Circuit function
1	761 (GY/RD)	Door ajar switch, right front

C602b

14630

N240
Door ajar switch, passenger side front (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C601 (NA)

14630

M221
Exterior rear view mirror, passenger side (17683)

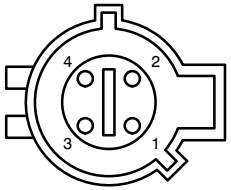

F04075

Pin	Circuit	Circuit function
1	945 (YE/BK)	Mirror motor, feed
2	544 (VT)	Up/Down mirror movement
3	–	not used
4	543 (DG)	Voltage supplied at all times (overload protected)

C603 (GY)

14630

M226
Door lock actuator, passenger side (218A42)

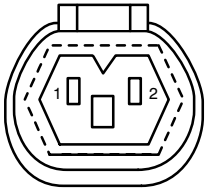

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output