C974

14A005

E17
Roof marker lamp,
right

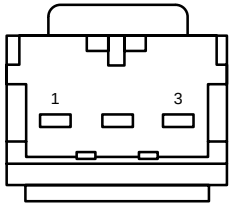

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C975

17C712

N626
Fontaine connector

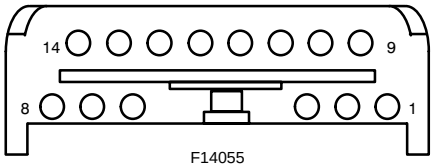

F14055

Pin	Circuit	Circuit function
1	186 (BN/LB)	Rear window defrost relay, switched power
2	59 (DG/VT)	Fused rear window defrost relay, switched power
3	19 (LG/RD)	Illumination, Power
4	57 (BK)	Ground
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	275 (YE)	Hydro max relay, control
7	1309 (RD/YE)	to, Parking brake switch (15A851)
8	3603 (RD)	to, Parking brake switch (15A851)
9	57 (BK)	Ground
10	19 (LG/RD	Illumination, Power
11	57 (BK)	Ground
12	19 (LG/RD)	Illumination, Power
13	57 (BK)	Ground
14	19 (LG/RD)	Illumination, Power

C984

15B484

E16
Roof marker lamp,
left

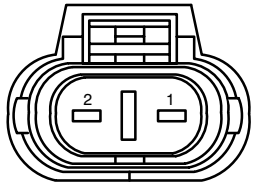

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C985

15B484

E266
Roof marker lamp,
left center

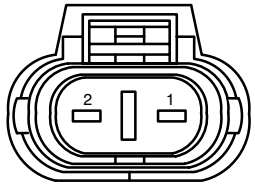

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C986

15B484

E267
Roof marker lamp,
center

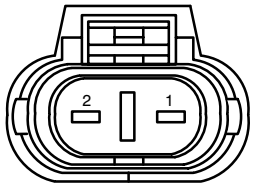

F02443

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps