W/O MEMORY **REVISED**

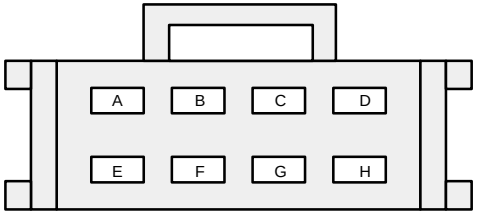

C309

LEFT SEAT CONTROL SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
A	979 (RD/LB)	Front of Seat Up Signal
B	982 (YE/LG)	Rear of Seat Down Signal
C	983 (RD/LG)	Rear of Seat Up Signal
D	990 (YE/LB)	Front of Seat Down Signal
E	1205 (BK)	Ground
F	981 (RD/WH)	Forward Signal
G	980 (YE/WH)	Rearward Signal
H	566 (DG)	Power Feed (Hot at All Times)

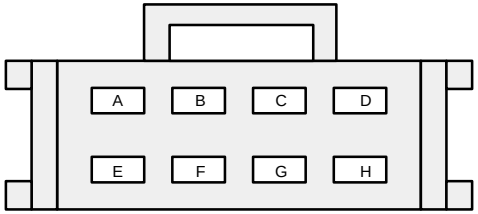

C357

RIGHT SEAT CONTROL SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
A	983 (RD/LG)	Rear of Seat Up Signal
B	990 (YE/LB)	Front of Seat Down Signal
C	979 (RD/LB)	Front of Seat Up Signal
D	982 (YE/LG)	Rear of Seat Down Signal
E	1205 (BK)	Ground
F	980 (YE/WH)	Rearward Signal
G	981 (RD/WH)	Forward Signal
H	51 (BK/WH)	Power Feed (Hot at All Times)