C341b

14A699

A207
Driver seat module
(14C718)

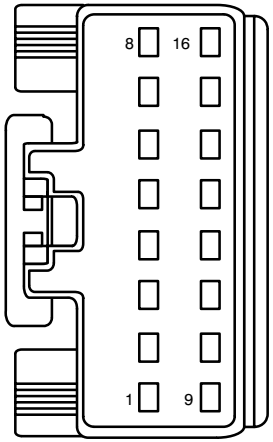

F16073

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	544 (VT)	Up/Down mirror movement
5	540 (RD)	Right/Left mirror movement
6	1545 (OG)	Mirror motor, feed
7	543 (DG)	Voltage supplied at all times (overload protected)
8	541 (DB)	Up/Down mirror movement
9	1494 (WH)	Adjustable pedal switch, Forward
10	1495 (RD)	Adjustable pedal switch, Rearward
11	1463 (RD/YE)	Power seat switch, left, to, Driver seat module (14C718)
12	1464 (YE)	Power seat switch, left, to, Driver seat module (14C718)
13	1465 (GY/WH)	Power seat switch, left, to, Driver seat module (14C718)
14	1466 (GY/OG)	Power seat switch, left, to, Driver seat module (14C718)
15	1468 (GY/LB)	Power seat switch, left, to, Driver seat module (14C718)
16	1467 (GY/YE)	Power seat switch, left, to, Driver seat module (14C718)

C341c

14A699

A207
Driver seat module
(14C718)



F16021

Pin	Circuit	Circuit function
1	1469 (RD/LB)	Driver seat module (14C718), to, Power seat motor assembly, left
2	–	not used
3	1474 (RD/LG)	Driver seat module (14C718), to, Power seat motor assembly, left
4	1471 (RD/WH)	Driver seat module (14C718), to, Power seat motor assembly, left
5	1491 (LB/YE)	Adjustable pedal motor (2C429), position, Sensor
6	1489 (LB/BK)	Driver seat module (14C718), to, Adjustable pedal motor (2C429)
7	447 (OG/R)	Sensor, return, from, Driver seat module (14C718)
8	–	not used
9	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
10	1472 (YE/WH)	Driver seat module (14C718), to, Power seat motor assembly, left
11	1473 (YE/LG)	Driver seat module (14C718), to, Power seat motor assembly, left
12	1470 (YE/LB)	Driver seat module (14C718), to, Power seat motor assembly, left
13	1490 (LB/OG)	Driver seat module (14C718), to, Adjustable pedal motor (2C429)
14	444 (LG/BK)	Driver seat module (14C718), to, Power seat motor assembly, left
15	443 (LG/RD)	Driver seat module (14C718), to, Power seat motor assembly, left
16	442 (LG/OG)	Seat position sensor – horizontal sense