Excursion

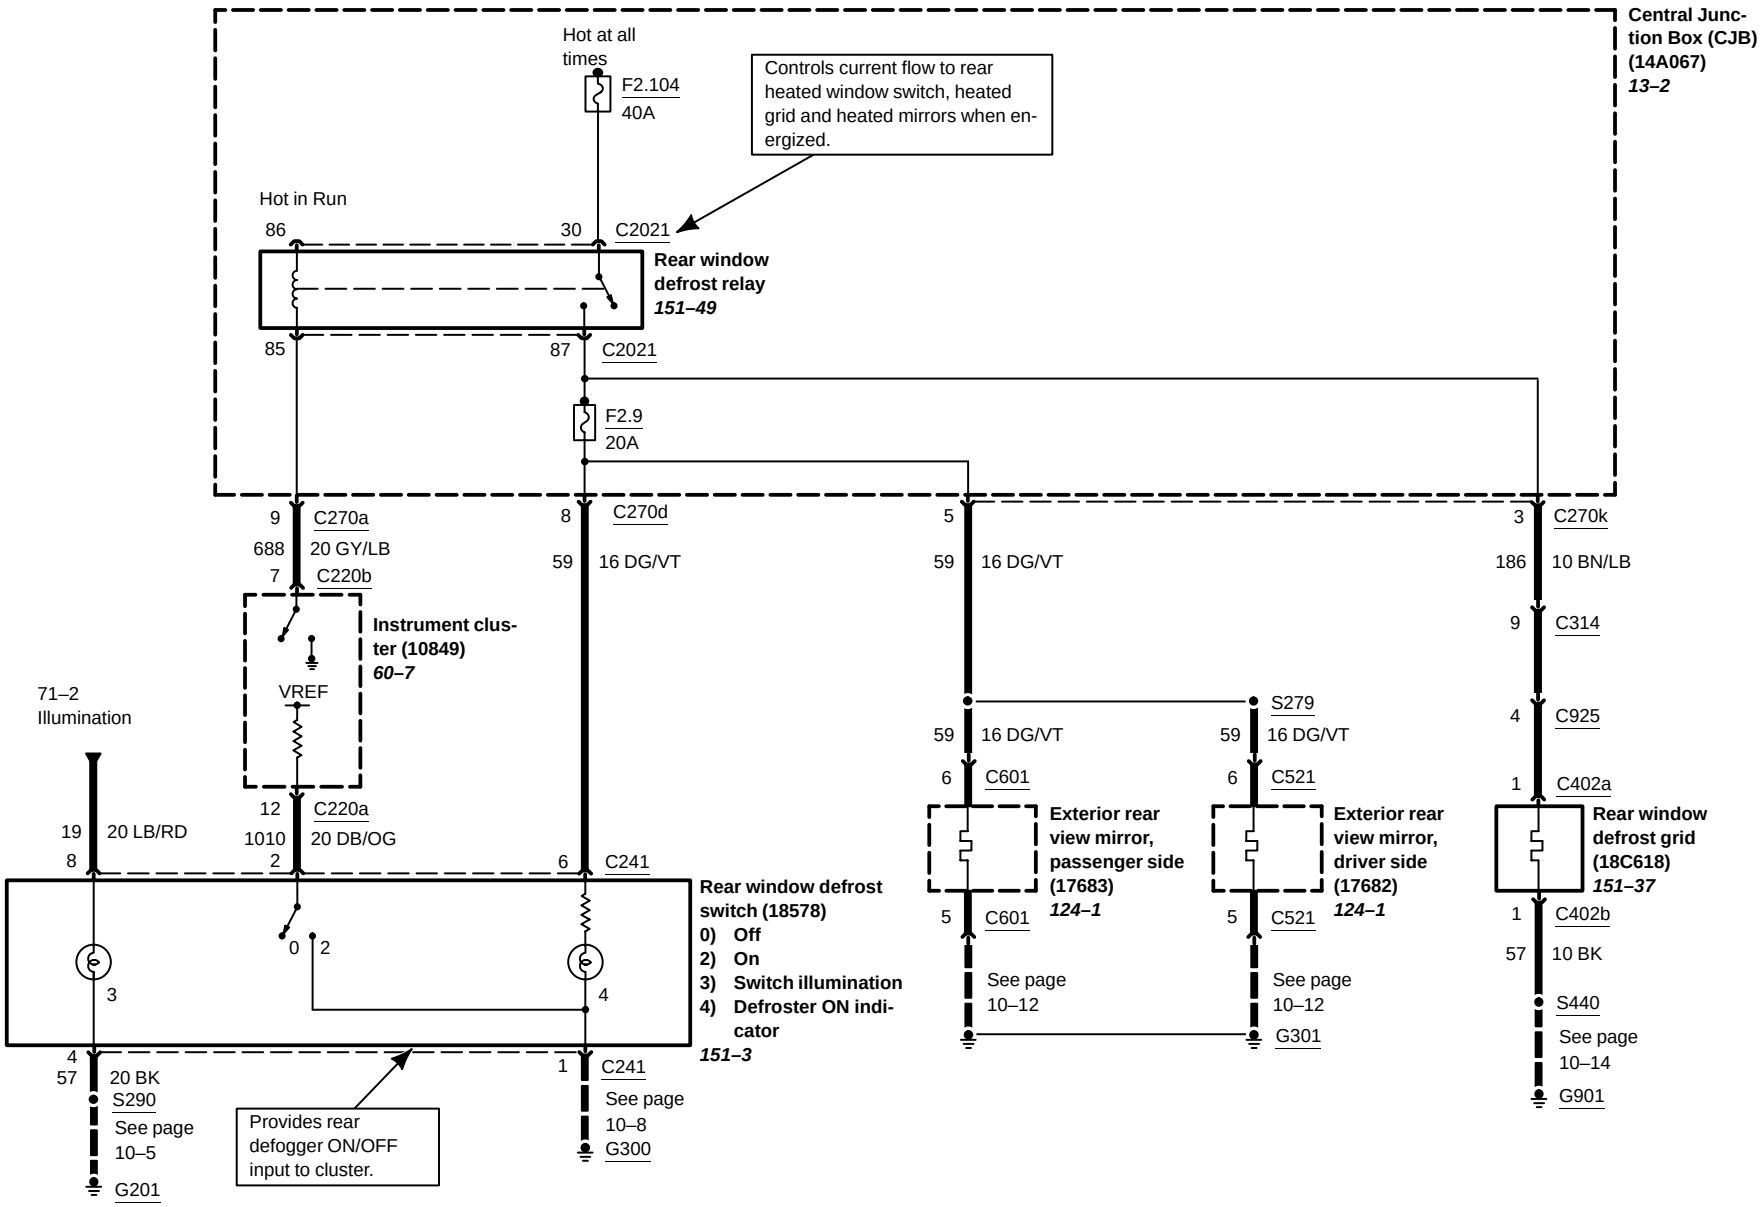
Central Junction Box (CJB) (14A067) 13–2
Hot at all times
F2.104
40A
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot in Run
86
30
C2021
Rear window defrost relay 151–49
85
87
C2021
F2.9
20A
9
C270a
688
20 GY/LB
7
C220b
Instrument cluster (10849) 60–7
VREF
71–2
Illumination
19
20 LB/RD
8
12
C220a
1010
20 DB/OG
2
8
C270d
59
16 DG/VT
6
C241
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator
151–3
0
2
3
4
4
57
20 BK
S290
See page 10–5
G201
Provides rear defogger ON/OFF input to cluster.
1
C241
See page 10–8
G300
5
59
16 DG/VT
6
C601
Exterior rear view mirror, passenger side (17683) 124–1
5
C601
See page 10–12
S279
59
16 DG/VT
6
C521
Exterior rear view mirror, driver side (17682) 124–1
5
C521
See page 10–12
G301
3
C270k
186
10 BN/LB
9
C314
4
C925
1
C402a
Rear window defrost grid (18C618) 151–37
1
C402b
57
10 BK
S440
See page 10–14
G901