C117

12B637

P72a
Coil On Plug (COP) 7 (12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1027 (PK/LG)	Coil On Plug (COP) 7 (12029), control

C118

12B637

P73a
Coil On Plug (COP) 8 (12A366)

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control

C120

12B637

Y69
Power steering valve solenoid (3783)

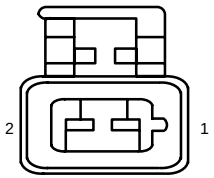

F02379

Pin	Circuit	Circuit function
1	86 (GY/OG)	ZF gear solenoid +
2	87 (TN/YE)	ZF gear solenoid, to, Air suspension module (3C142)

C122

14290

M219
Speed control actuator

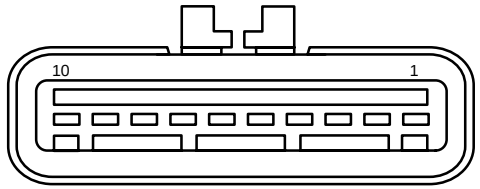

F10113

Pin	Circuit	Circuit function
1	914 (TN/OG)	SCP Bus +
2	915 (PK/LB)	SCP Bus –
3	–	not used
4	–	not used
5	151 (LB/BK)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	296 (WH/VT)	Fused accessory relay, switched power, output
8	–	not used
9	636 (OG)	Speed control switch
10	676 (PK/OG)	Vehicle Speed Sensor (VSS) –

C123

12B637

Y134
EVAP canister purge valve

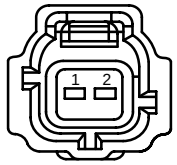

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Canister vent, Powertrain Control Module (PCM) (12A650), EVAP canister purge valve