C448 (BK)

14405

E9
Lamp assembly, left rear

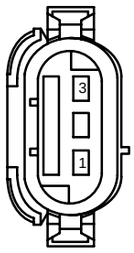

F03099

Pin	Circuit	Circuit Function
1	31-LF23 (BK)	Ground
2	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), switched
3	15S-LG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched

C449 (BK)

14405

E10
Lamp assembly, right rear

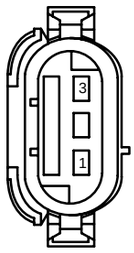

F03099

Pin	Circuit	Circuit Function
1	31-LF24 (BK)	Ground
2	29S-LF20 (OG)	Voltage supplied at all times (overload protected), switched
3	15S-LG21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched

C451 (GN)

14014

A77
Anti–theft/central locking module

A322
Tailgate release module

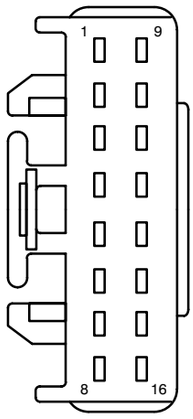

F16029

Pin	Circuit	Circuit Function
1	29-AA17 (OG/WH)	Voltage supplied at all times (overload protected)
2	32-AA27 (WH/GN)	Switched between: Battery voltage, Ground or Open
3	31S-AA30 (BK/YE)	Ground, switched
	31S-GL7 (BK/YE)	Ground, switched
4	–	not used
5	31-AA17 (BK)	Ground
6	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
7	32-AA59A (WH/BK)	Switched between: Battery voltage, Ground or Open
8	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
9	–	not used
10	15S-AA17 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
11	31-AA17A (BK)	Ground
12	31S-AA85 (BK/RD)	Ground, switched
13	31-AA17A (BK)	Ground
	31S-AA64 (BK/GN)	Ground, switched
14	8-AA36 (WH)	Sensor signal
15	31S-AA39 (BK/YE)	Ground, switched
16	31S-AA63 (BK/OG)	Ground, switched