C4182 (GY)

13A409

Third row folding seat motor, right

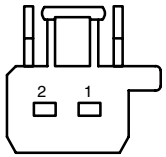

F02053

Pin	Circuit	Circuit function
1	1949 (OG/BK)	Third row folding seat motor, right, Down, feed
2	1950 (PK/DB)	Third row folding seat motor, right, Up, feed

C4183 (BK)

13A409

Third row folding seat relay, left

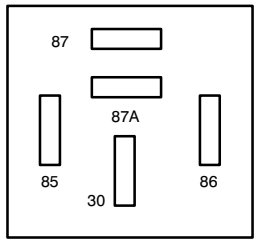

F05129

Pin	Circuit	Circuit function
30	2115 (OG)	Voltage supplied at all times (overload protected)
85	1951 (TN)	Third row folding seat relay, control
86	729 (RD/WH)	Voltage supplied at all times (overload protected)
87	51 (BK/WH)	Third row folding seat relay, left, output
87A	–	not used

C4184 (BK)

13A409

Third row folding seat relay, right

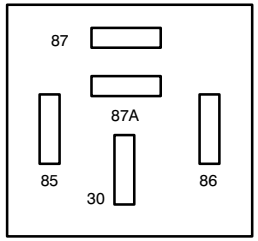

F05129

Pin	Circuit	Circuit function
30	2116 (YE)	Voltage supplied at all times (overload protected)
85	1951 (TN)	Third row folding seat relay, control
86	729 (RD/WH)	Voltage supplied at all times (overload protected)
87	1946 (OG/LB)	Third row folding seat relay, right, output
87A	–	not used

C4185 (WH)

14086

Liftgate lock actuator

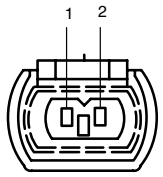

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door unlock, output
2	118 (PK/OG)	Door lock, output