* MANUAL
** AUTOMATIC
*** ESOF

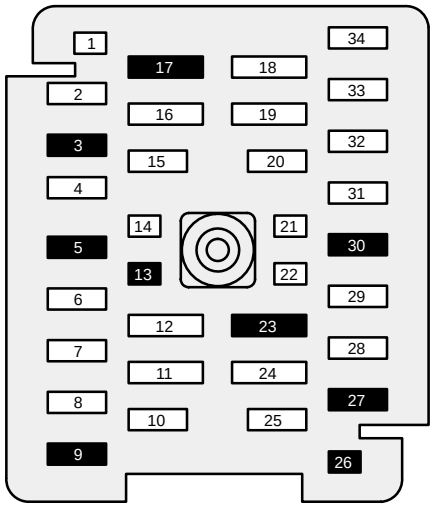

C243
CENTRAL JUNCTION BOX

PIN	CIRCUIT	CIRCUIT FUNCTION
1	533 (TN/RD)	Power Feed to (4WABS) Module
	294 (WH/LB)	Fused Ignition Run Feed
2	188 (WH/BK)	Power Feed to Fog Lamp Relay
3	–	NOT USED
4	1000 (RD/BK)	Fused Ignition Start Feed
5	–	NOT USED
6	160 (DB/WH)	Headlamp–Left Low Beam
7	13 (RD/BK)	Headlamp Dimmer Switch to Low Beams
8	296 (WH/VT)	Fused Ignition Run Feed
9	–	NOT USED
10	991 (TN/LB)	Left Window Switch Down to GEM
11	1052 (TN/BK)	Fused Battery Feed to Central Junction Box
12	687 (GY/YE)	Fused Ignition Run Feed
13	–	NOT USED
14	679 (GY/BK)	Radio (Premium Sound)
15	161 (DG/OG)	Headlamp–Right Low Beam
16	964 (DB/LG)	Power (Hot in Start or Run)
17	–	NOT USED
18	32 (RD/LB)	Starter Control
19	*481(GY/YE)	*Clutch Pedal Position (CPP) Switch
	**325 (DB/OG)	**Power (Hot in Start)
	***325 (DB/OG)	***Digital Transmission Range (DTR) Sensor
20	950 (WH/BK)	Fused Ignition Run/Acc Feed
21	679 (GY/BK)	Vehicle Speed Input to GEM
22	679 (GY/BK)	Overhead Console
23	–	NOT USED
24	57 (BK)	Ground
25	1001 (WH/YE)	Fused Battery Feed
	483 (RD)	Diagnostic Test Input/Keep Alive Input
26	–	NOT USED
27	–	NOT USED
28	995 (GY)	Left Window Switch Current Sense (HIGH) to GEM
29	* 33 (WH/PK)	Fused Ignition/Start Feed
	** 325 (DB/OG)	Fused Ignition/Start Feed
30	–	NOT USED
31	640 (RD/YE)	Fused Ignition Run/Start Feed
32	705 (LG/OG)	Power Feed to Ignition Lamps
33	14 (BN)	Headlamp Switch to Tail/Side Lamps
34	16 (RD/LG)	Fused Ignition Run/Start Feed