C187

12B637

Y207
Injector 7

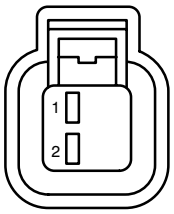

F02069

Pin	Circuit	Circuit Function
1	91S-RL16 (BN/WH)	Ground, Switched
2	15S-RL16 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C188

12B637

Y209
Injector 8

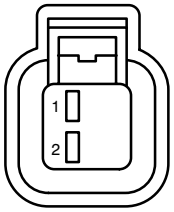

F02069

Pin	Circuit	Circuit Function
1	91S-RL17 (BN)	Ground, Switched
2	15S-RL17 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C189

12B637

B8
Throttle Position Sensor (TPS)

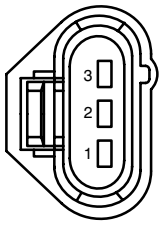

F03145

Pin	Circuit	Circuit Function
1	9-RJ28 (BN)	Sensor signal return (reference/ ground)
2	8-RJ28 (WH)	Sensor signal
3	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)

C191

12B637

A149
Inlet manifold runner control (IMRC) module

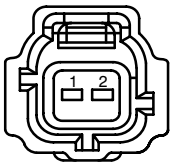

F02101

Pin	Circuit	Circuit Function
1	15S-RL20 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL20 (BN/YE)	Ground, Switched