C831

14K733

A27
Speed control module

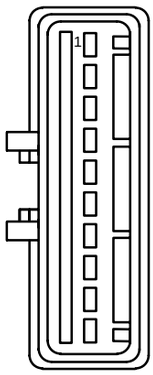

F10011

Pin	Circuit	Circuit Function
1	8-PG11 (WH/BK)	Sensor signal
2	–	not used
3	8-PG18 (WH/BU)	Sensor signal
4	15S-PG17 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	8-PG13 (WH)	Sensor signal
6	9-PG13 (BN)	Sensor signal return (reference/ground)
7	15-PG12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
8	–	not used
9	15S-PG16 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91-PG12 (BN/WH)	Ground

C832

12A690

B11
Vehicle Speed Sensor (VSS)

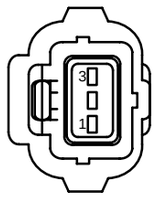

F03093

Pin	Circuit	Circuit Function
1	91-RJ29 (BK/OG)	Ground
2	8-RJ29 (WH/BU)	Sensor signal
3	15-RJ29 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C834

14K733

E7
Headlamp, right

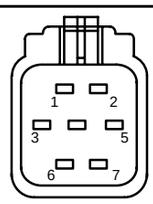

F07017

Pin	Circuit	Circuit Function
1	–	not used
2	64-LE46 (BU/RD)	D.C. Voltage, hot only in Run (not overload protected)
3	29S-LF16 (OG/GN)	Voltage supplied at all times (overload protected), switched
4	31-LE30 (BK)	Ground
5	–	not used
6	15S-LE22 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	15S-LE23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched