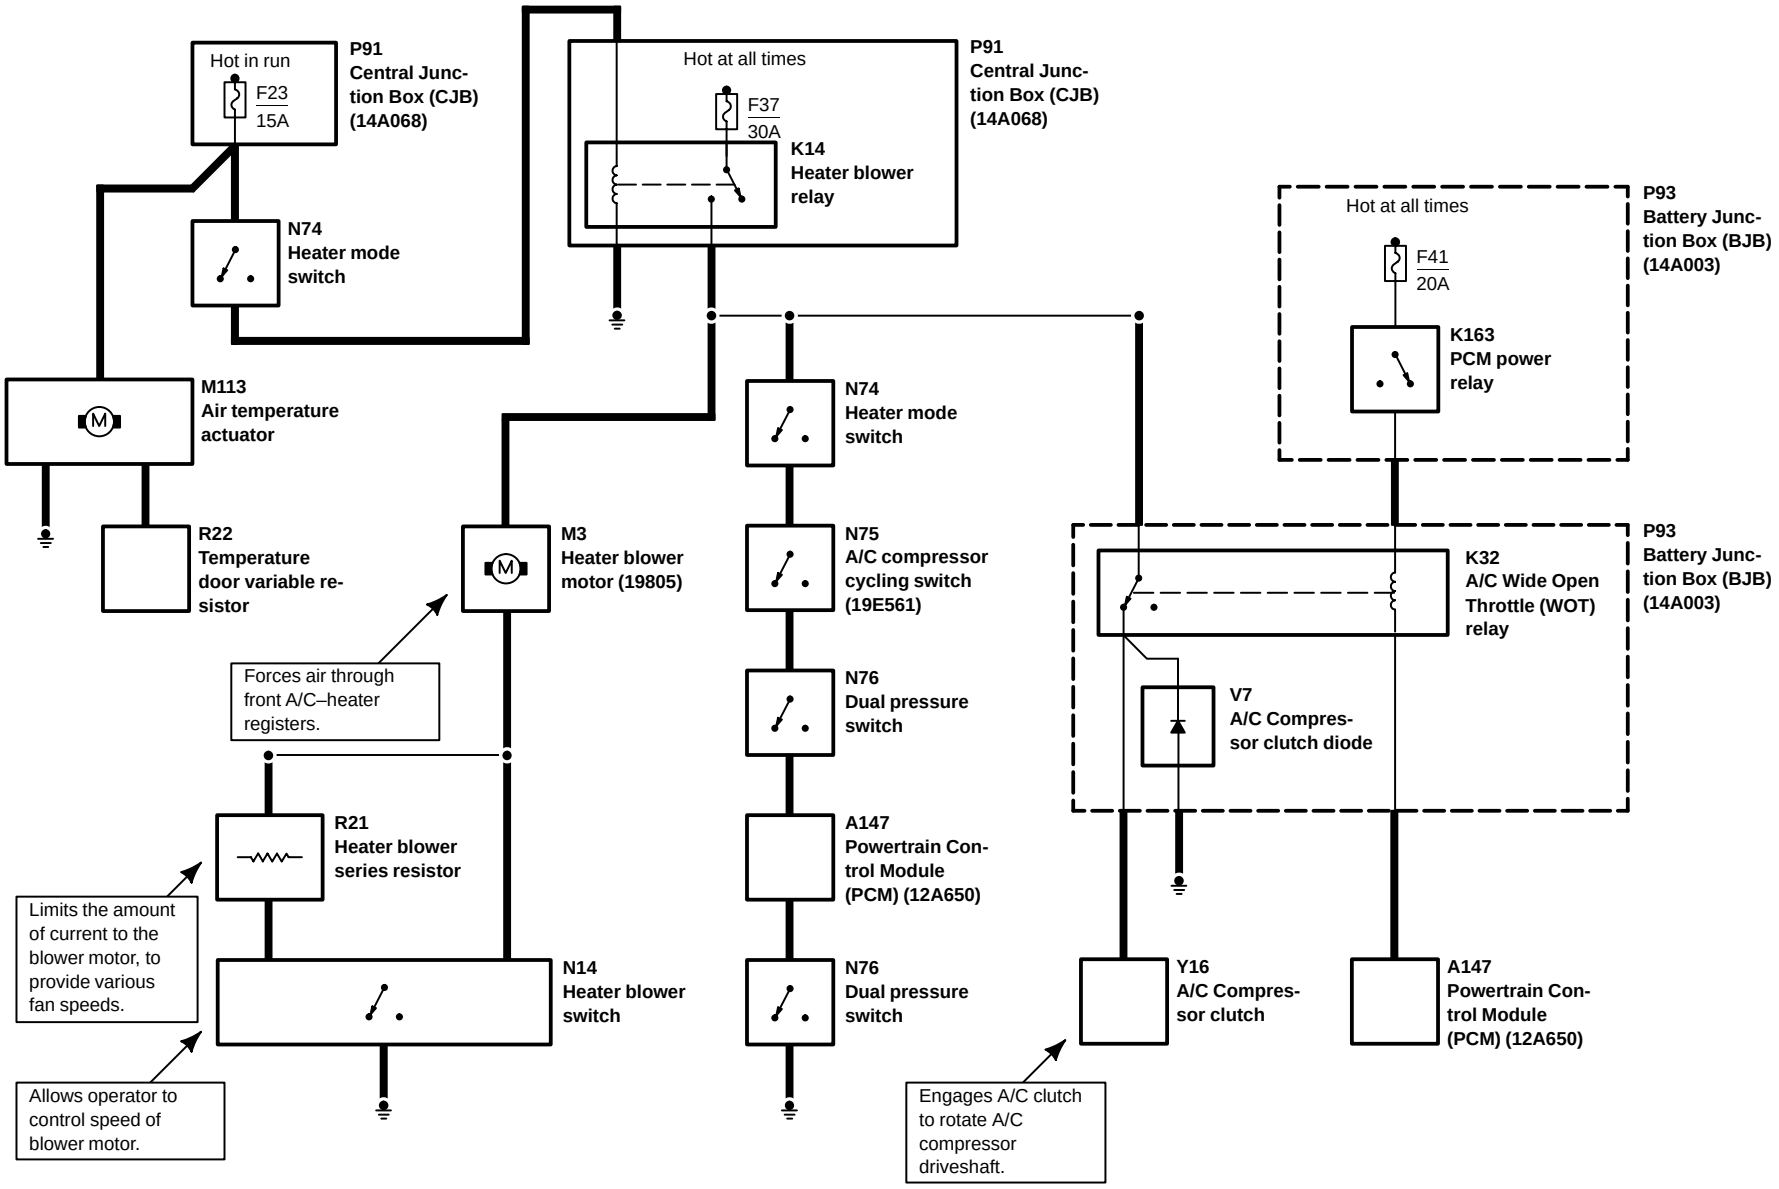
Hot in run
F23
15A
P91
Central Junction Box (CJB)
(14A068)
Hot at all times
F37
30A
K14
Heater blower relay
P91
Central Junction Box (CJB)
(14A068)
N74
Heater mode switch
Hot at all times
F41
20A
K163
PCM power relay
P93
Battery Junction Box (BJB)
(14A003)
M113
Air temperature actuator
N74
Heater mode switch
R22
Temperature door variable resistor
M3
Heater blower motor (19805)
N75
A/C compressor cycling switch (19E561)
K32
A/C Wide Open Throttle (WOT) relay
P93
Battery Junction Box (BJB)
(14A003)
Forces air through front A/C–heater registers.
N76
Dual pressure switch
V7
A/C Compressor clutch diode
R21
Heater blower series resistor
A147
Powertrain Control Module (PCM) (12A650)
Limits the amount of current to the blower motor, to provide various fan speeds.
N14
Heater blower switch
N76
Dual pressure switch
Y16
A/C Compressor clutch
A147
Powertrain Control Module (PCM) (12A650)
Allows operator to control speed of blower motor.
Engages A/C clutch to rotate A/C compressor driveshaft.