C627 (BK)

14A005

Seat adjust switch,
passenger side front

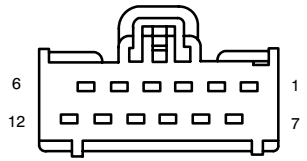

F12137

Pin	Circuit	Circuit function
1	985 (RD/LB)	Front height motor, Down
2	918 (GY)	Seat regulator feed, Passenger seat backrest motor, Up
3	919 (GY/BK)	Seat regulator feed, Passenger seat backrest motor, Down
4	989 (RD/LG)	Rear height motor, Down
5	988 (YE/LG)	Rear height motor, Up
6	–	not used
7	57 (BK)	Ground
8	984 (YE/LB)	Front height motor, Up
9	986 (YE/WH)	Fwd/Rwd motor, Forward
10	987 (RD/WH)	Fwd/Rwd motor, Rearward
11	517 (BK/WH)	Voltage supplied at all times (overload protected)
12	–	not used

C630

14C719

Seat heater switch,
passenger side

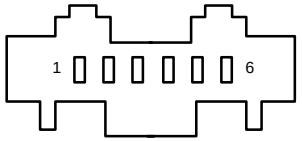

F06325

Pin	Circuit	Circuit function
1	1020 (DG/VT)	Climate controlled seat module – High
2	296 (WH/VT)	Voltage in Run or Accessory (overload protected)
3	1019 (TN/LB)	indicator, High –
4	1018 (LG/OG)	indicator, Low –
5	1255 (WH/RD)	Climate controlled seat module – Low
6	57 (BK)	Ground

C634

14A005

Exterior door handle
switch, right front



F01159

Pin	Circuit	Circuit function
1	465 (WH/LB)	Illuminated entry signal