W/MEMORY

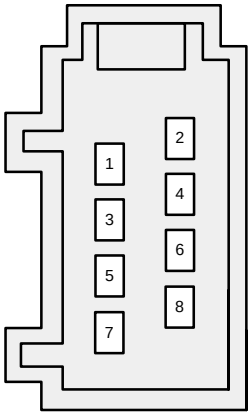

C311

DRIVER POWER SEAT CONTROL SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	875 (BK/LB)	Ground
2	1463 (RD/YE)	Switch to Front Motor Feed/Return (Up)
3	1466 (GY/OG)	Switch to Motor Feed/Return (Rearward)
4	1467 (GY/YE)	Switch to Rear Motor Feed/Return (Down)
5	1465 (GY/WH)	Switch to Motor Feed/Return (Forward)
6	1468 (GY/LB)	Switch to Rear Motor Feed/Return (Up)
7	956 (OG/LG)	Power (Hot at All Times)
8	1464 (YE)	Switch to Front Motor Feed/Return (Down)

REVISED

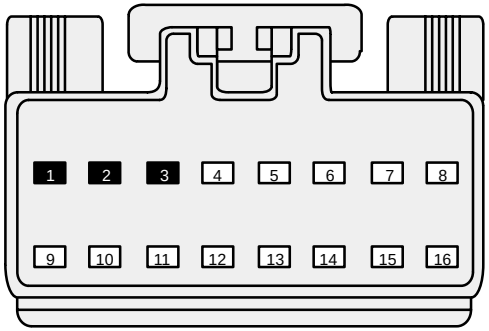

C357

DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	–	NOT USED
4	1475 (PK/OG)	Mirror Switch Vertical Right
5	1476 (RD/OG)	Mirror Switch Horizontal Left
6	1477 (YE/BK)	Mirror Switch Common
7	1478 (DG/OG)	Mirror Switch Horizontal Right
8	1479 (DB/OG)	Mirror Switch Vertical Left
9	1492 (LB/RD)	Pedal Backward
10	1493 (PK/BK)	Pedal Forward
11	1463 (RD/YE)	LF Seat Module to Front Motor LH
12	1464 (YE)	LF Seat Module to Front Motor LH
13	1465 (GY/WH)	LF Seat Module to Horizontal Motor LH
14	1466 (GY/OG)	LF Seat Module to Horizontal Motor LH
15	1468 (GY/LB)	LF Seat Module to Rear Motor LH
16	1467 (GY/YE)	LF Seat Module to Rear Motor LH