EXCURSION

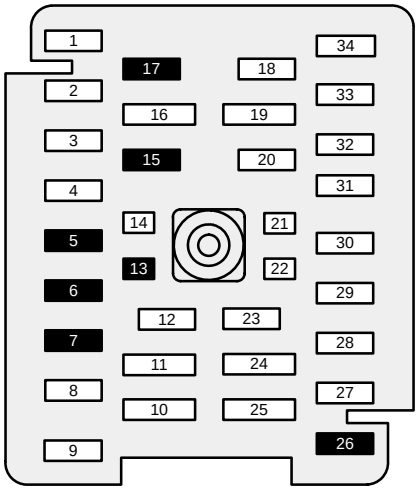

C242b

CENTRAL JUNCTION BOX

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	937 (RD/WH)	Power Feed to Air Bag Diagnostic Module	18	33 (WH/PK)	Fused Start Power Feed
2	294 (WH/LB)	Customer Access	19	32 (RD/LB)	Start Power Feed
3	533 (TN/RD)	Anti-Lock Brake System (ABS) Module	20	297 (BK/LG)	EVN/ACC Fused Feed
4	33 (WH/PK)	Clutch Pedal Position Switch	21	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
5	59 (DG/VT)	Heated Backlite Switch and Heated Mirrors	22	679 (GY/BK)	Speedometer
6	295 (LB/PK)	Power (Hot in Run) Output	23	6 (YE/LG)	Horn Relay to Horns
7	1040 (RD/BK)	Power (Hot in Run) Input	24	57 (BK)	Ground
8	296 (WH/VT)	A/C Clutch Feed	25	22 (LB/BK)	Fused Battery Feed to Stoplamp Switch
9	1010 (DB/OG)	GEM to Heated Backlite Switch			Logic
10	991 (TN/LB)	Left Window Switch Up to GEM	26	–	NOT USED
11	1052 (TN/BK)	Fused Battery Feed to Central Junction	27	1009 (OG/YE)	GEM to Heated Grid Relay
		Box	28	995 (GY)	Left Window Switch Current Sense (High) to
12	687 (GY/YE)	Fused Ignition RUN Feed			GEM
13	–	NOT USED	29	1000 (RD/BK)	Start Feed to Audio
14	679 (GY/BK)	Overhead Trip Computer (OTC) Module	30	640 (RD/YE)	Fused Ignition START/RUN Feed
15	–	NOT USED	31	1044 (WH/YE)	Fused Ignition RUN/START Feed
16	1000 (RD/BK)	Run Start Power Feed	32	54 (LG/YE)	Power Feed to Interior Lamp Relay
17	186 (BN/LB)	Rear Window Defrost/Heated Mirrors	33	797 (LG/VT)	Fused Battery Power RICP/ CD Changer
			34	16 (RD/LG)	Fused Ignition RUN/START Feed