C220b

14401

A30
Instrument cluster

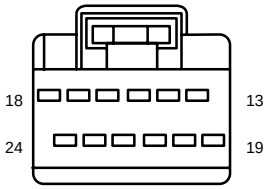

F12077

Pin	Circuit	Circuit function
13	608 (BK/YE)	Air bag indicator, control
14	977 (VT/WH)	Brake indicator, control
15	904 (LG/RD)	Generator/Battery indicator, control
16	–	not used
17	915 (PK/LB)	SCP Bus –
18	914 (TN/OG)	SCP Bus +
19	–	not used
20	1215 (WH/LG)	TX, signal
21	1216 (GY/OG)	RX, signal
22	143 (LB/YE)	Message center switch, Power (Start or Run)
23	703 (WH/OG)	Compass data –
24	702 (WH/BK)	Compass data +

C222

14401

B218
Steering column
position sensor



F04027

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	634 (BR)	Steering position sensor (18B015), to, Air suspension module (3C142), Terminal + B
3	633 (R)	Steering position sensor (18B015), to, Air suspension module (3C142), Terminal + A
4	296 (WH/VT)	Hot in Run

C228a

14401

A205
Electronic Automatic
Temperature Control
(EATC) module
(19980)



F13015

Pin	Circuit	Circuit function
8	1070 (BR/LB)	Remote control unit, control
9	438 (RD/WH)	Air temperature door variable resistor –
10	269 (LB/OG)	Heater blower motor (19805), to, Heater blower switch
11	–	not used
12	1069 (OG/LB)	Electronic Automatic Temperature Control (EATC) module (19980)
13	245 (BN/LG)	Servo motor
14	484 (OG/BK)	Headlamp switch, on input
21	790 (WH/OG)	In–vehicle temperature sensor (19C734), input
22	688 (GY/LB)	Electronic Automatic Temperature Control (EATC) module (19980) to Rear window defrost relay
23	752 (YE/RD)	Blower switch speed control, to resistor
24	754 (LG/WH)	Blower switch speed control, to resistor
25	660 (YE/LG)	Air temperature door variable resistor +
26	246 (P)	Temperature blend door actuator (19E616), signal