C393a

VF3862

A267
Rear Seat Entertainment (RSE) module

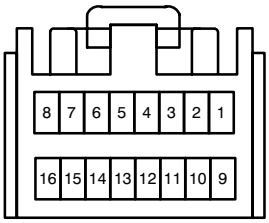

F16103

Pin	Circuit	Circuit Function
1	57 (BK/LG)	Ground
2	15 (TN/WH)	Speaker, left – output +
3	25 (GY/BU)	Speaker, left – input +
4	35 (TN/YE)	Speaker, left – input +
5	57 (BK/GN)	Ground – Audio unit
6	65 (BN/PK)	Speaker, right – input –
7	55 (OG/RD)	Speaker, right – input +
8	45 (TN/LG)	Speaker, right – output +
9	19 (LG/RD)	Illumination +
10	19 (BK)	Illumination –
11	–	not used
12	75 (LB/PK)	ACP Bus A
13	85 (TN)	ACP Bus B
14	57 (BK/LG)	Ground
15	16 (LG/PK)	Voltage supplied at all times (overload protected)
16	23 (LG/BK)	Audio System ON (ASYSON)

C393b

VF3862

A267
Rear Seat Entertainment (RSE) module

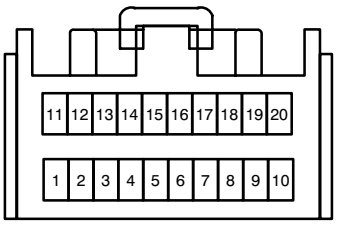

F20039

Pin	Circuit	Circuit Function
1	115 (VT)	CD changer – Left +
2	125 (LG/RD)	CD changer – Left –
3	135 (GY)	CD changer – Right +
4	145 (OG/BK)	CD changer – Right –
5	48	Shield – Video display
6	205 (BK/WH)	Video cassette player – Video display +
7	225 (DB/RD)	Video cassette player – audio, Left +
8	245 (YE/RD)	Video cassette player – audio, Right +
9	95 (DG)	Video display +
10	255 (PK/DG)	Video cassette player, control
11	155 (RD)	Audio unit – Left +
12	165 (WH)	Audio unit – Left –
13	175 (OG)	Audio unit – Right +
14	185 (YE)	Audio unit – Right –
15	48	Shield – Audio unit
16	195 (OG/BK)	Video cassette player – Video display –
17	215 (PK/BK)	Video cassette player – audio, Left –
18	235 (VT/YE)	Video cassette player – audio, Right –
19	105 (DB)	Video display –
20	48	Shield – CD changer