C1185 (BK)

* 3.8L

***9D930**
12B637

Fuel injector 5
(9F593)

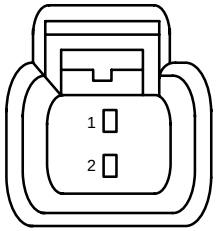

F02054

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1186 (BK)

* 3.8L

***9D930**
12B637

Fuel injector 6
(9F593)

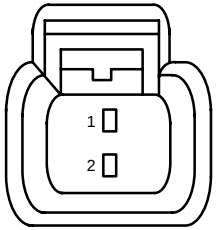

F02054

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1196 (BK)

9D930

Ignition transformer
capacitor

F01031

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)

C1216 (BK)

14K095

Charge air cooler
pump relay

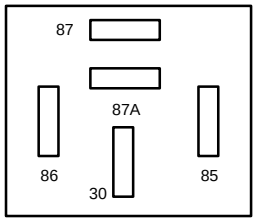

F05129

Pin	Circuit	Circuit function
30	17 (WH)	Voltage supplied at all times (overload protected)
85	369 (WH/OG)	Charge air cooler pump relay, control
86	361 (RD)	Voltage supplied in Start and Run (overload protected)
87	18 (OG/YE)	Charge air cooler pump relay, switched power, output
87A	–	not used

C1217

12A581

Charge air cooler
pump motor

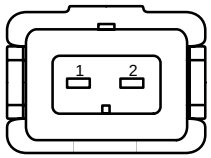

F02089

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	18 (OG/YE)	Charge air cooler pump relay, switched power, output