C123

14290

EVAP canister purge valve

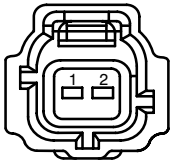

F02103

Pin	Circuit	Circuit function
1	15S-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S–RL25 (BK/BU)	Ground, Switched

C124

14290

Brake fluid level switch (2L414)

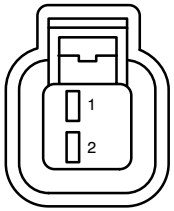

F02069

Pin	Circuit	Circuit function
1	8-GC7 (WH/RD)	Sensor signal
2	31-GC7 (BK)	Ground

C125

17A477

Windshield wiper motor (17508)

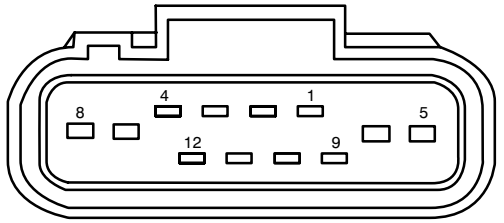

F12167

Pin	Circuit	Circuit function
1	31S-XL52 (BK/RD)	Ground, switch
2	–	not used
3	91-KA8 (BK/BU)	Ground
4	–	not used
5	30-KA40 (RD/BU)	Voltage supplied at all times (not overload protected)
6	31-KA9 (BK/OG)	Ground
7	30S-KA7 (RD/WH)	Voltage supplied at all times (not overload protected), switch
8	15-KA39 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
9	31S-XL53 (BK/WH)	Ground, switch
10	31S-XL50 (BK/OG)	Ground, switch
11	31S-XL51 (BK/GN)	Ground, switch
12	31S-KA19 (BK/RD)	Ground, switch